

MULTIMETER

EPM-06 / 06C / 06CS

INDEX

Precautions for Installation and Safe Usage.....	1
Front Panel and Usage of Buttons.....	1
General Information and Applications.....	1
Using the Buttons.....	2
Transformer Menu (Chr / Im / Utr / ConnECther).....	2
User Password Settings (Pin Menu).....	2
Activating the User Password (Pin Act Menu).....	2
Changing the User Password (Pin Chg Menu).....	2
Output Setting Menu	3
Current Setting Menu (SP Current Menu).....	3
High/Low Current Settings (SP Cur Hs, SP Cur Lo Menu).....	3
Hysteresis Settings for High/Low Currents (Cur Hs Hys, Cur Ls Hys Menu).....	3
Delay-on Time for High/Low Currents (Hs on dEL, Lo on dEL Menu).....	3
Delay-off Time for High/Low Currents (Hs off dEL, Lo off dEL Menu).....	3
Start and Auto Function (Start dEL and Auto Stt Menu).....	4
Instant Trip Function (Cur inS trP Menu).....	4
Voltage Setpoint Menu (SP Volt Menu).....	4
High/Low Voltage Settings (SP UoL Hs, SP UoL Lo Menu).....	4
Hysteresis Settings for High/Low Voltages (UoL Hs, UoL Lo Hys Menu).....	5
Delay-on Time for High/Low Voltages (Hs on dEL, Lo on dEL Menu).....	5
Delay-off Time for High/Low Voltages (Hs off dEL, Lo off dEL Menu).....	5
Frequency Menu	6
High/Low Frequency Settings (Frq Hs, Frq Lo Menu).....	6
Hysteresis Settings for High/Low Frequencies (Frq Hs Hys, Frq Lo Hys).....	6
Delay-on / Delay-off Time for High/Low Frequencies (Frq on dEL, Frq off dEL).....	6
Phase Sequence (Voltage Sequence Menu) and Instant Trip (UoL inS trP Menu) Menu	6
Erasing the Max., Min. and Max. Demand Values (Reset Menu).....	6
Demand and Demand and Max. Demand (dE t Menu).....	7
Communication Menu (RS-485)	7
Technical Features and Default Factory Settings	7
Connection Diagram	7
Output, SP Current and SP Volt menus are available for EPM-06C/06CS; RS-485 menu is available for EPM-06CS.	



PRECAUTIONS FOR INSTALLATION AND SAFE USE

In CT-25 (120A) compliant models, only CT-25 current transformer must be used.

Other type of CT's have a high risk to damage to device.

- Failure to follow those instructions will result in death or serious injury.
- Disconnect all power before working on equipment.
- When the device is connected to the network, do not remove the front panel.
- Do not try to clean the device with solvent or the like. Only clean with dry cloth.
- Verify correct terminal connections when wiring.
- Electrical equipment should be serviced only by your component seller.
- Only for rack panel mounting.
- Fuse must be F type and limit value doesn't exceed 1A.

No responsibility is assured by the manufacturer or any of its subsidiaries for any consequences arising out of the use of this material.

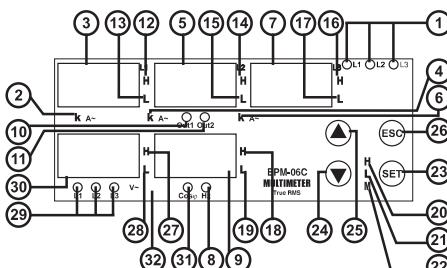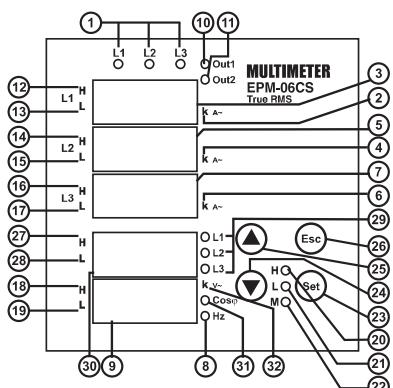

- 1 Phase LEDs: The LEDs turn on when the voltage value, which is applied to one of the current inputs, reach 30 V
- 2 First display's k LED (for L1). Measurement parameter is the unit of kilo when LED is turned on, ie: kA, kV
- 3 Display for L1.
- 4 Second display's k LED (for L2 and neutral current). Measurement parameter is the unit of kilo when LED is turned on, ie: kA, kV
- 5 Display for L2 and neutral current.
- 6 Third display's k LED (for L3). Measurement parameter is the unit of kilo when LED is turned on, ie: kA, kV
- 7 Display for L3.
- 8 Displays network frequency when Hz LED is turned on.
- 9 Display for frequency and Cos (for EPM-06C/06CS).
- 10 First warning output LED (Out1). Turned on when the output is activated.
- 11 Second warning output LED (Out2). Turned on when the output is activated.
- 12 Over current / voltage warning output for L1. (EPM-06C/06CS)
- 13 Low current / voltage warning output for L1. (EPM-06C/06CS)
- 14 Over current / voltage warning output for L2. (EPM-06C/06CS)
- 15 Low current / voltage warning output for L2. (EPM-06C/06CS)
- 16 Over current / voltage warning output for L3. (EPM-06C/06CS)
- 17 Low current / voltage warning output for L3. (EPM-06C/06CS)
- 18 Over current / frequency warning output for frequency (EPM-06C/06CS).
- 19 Low current / frequency warning output for frequency (EPM-06C/06CS).
- 20 M LED for max, instant current and voltage. Max, instant currents and voltages are displayed when this LED is turned on.
- 21 L LED for min, instant current and voltage. Min, instant currents and voltages are displayed when this LED is turned on.
- 22 M LED for max, demand. Max, demand values are displayed when this LED is turned on.
- 23 SET button. It is used to enter into the menu and to save the values. If SET button is pressed for 3 sec. in the measurement mode, you can enter into menus. This button is used for monitoring the max, (H), Min, (L) current values and max, demand values in measurement mode.
- 24 Downward selection button. And also switching between the phases for EPM-06C/06CS.
- 25 Upward selection button. And also switching between the phases for EPM-06C/06CS.
- 26 ESC button. Displaying the neutral current during the measurement mode. Escaping from the menu. And also used for switching off the Latch function while this function has activated.
- 27 Over voltage warning LED which is displayed in fourth display.
- 28 Low voltage warning LED which is displayed in fourth display.
- 29 These LEDs are used for which phase refers to measurement of voltage in 4th display.
- 30 Display for monitoring the phase voltages (According to related phase).
- 31 This LED; Indicates Cos when L1, L2 or L3 activated for monitoring voltage values in 4th display.
- 32 Indicates average value of **inductive Cos** when L1-L2 are activated. Indicates average value of **capacitive Cos** when L2-L3 are activated.

General Information

EPM-06/06C/06CS is designed for measuring the below parameters in a 3-Phase system, Phase current, frequency, neutral current and voltages (Phase-Phase and Phase-Neutral).

EPM-06C/06CS:

Device has 2 warning output which named as Out1 and Out2, (NO-Normally Open) Please refer to "Output" menu for the functions of the relays.

MULTIMETER

EPM-06 / 06C / 06CS

Below measurement and application can be implemented with EPM-06/06C/06CS.

- 1) Phase currents (IL), Neutral current (IN), frequency and Cosφ (EPM-06C/06CS); Phase-Phase and Phase-Neutral voltages can be measured.
- 2) Existence of live phases can be observed by L1-L2-L3 LEDs on the device.
- 3) Min. and max. values for measured currents and voltages can be monitored with only one button.
- 4) Max. demand values for measured current can be monitored, demand time can be defined in "dE" menu.
- 5) A 4 digit password can be defined from pin menu in order to prevent the change of settings by unauthorized person.
- 6) Current transformer ratio is programmable, (1 ... 2000)
- 7) Current transformer ratio can be programmed in term of "turn number" between 1...20 (for CT-25 adapted devices).
- Voltage transformer ratio is programmable, (0,1 ... 4000)
- 7) A user defined measurement range is used for monitoring the voltages and currents; and Out1 & Out2 outputs are used for warning the user and disconnecting the device in case of exceeding the limits of measurement range.
- 8) In case of using the device for measuring the current values of motors etc., start delay (AUTO rSt) function can be used for preventing the equipment damage or improper tripping, which is because of the demurrage current.
- 9) When a failure has occurred use the Latch function, in order to keep the device with saving its position (Latched), even if the failure conditions are removed.

7th, 8th and 9th subjects are valid for EPM-06C/06CS.

Using the Buttons:

Some buttons and button groups are used for the below special function when device is in the measurement mode (Without selecting a menu).

Switching between the phase-phase voltages in fourth display.
Used for changing the menu settings and parameters in programming mode.

Used for monitoring min. / max. currents and voltages or max. demand values. Switching to the programming mode if it pressed for 3 sec. In programming mode, it is used for switching to the menu and saving changes for the parameters.

Switching between neutral current and phase current in measurement mode. Switching to the previous menu and escaping the programming menu without saving the changes.
If the Latch function is turned on (EPM-06C/06CS); output will be released when current(s) of system is exceed the defined values. When the system's current, turns back to normal values then output doesn't react. Output can be triggered by the "ESC" button.

Commissioning and menu setting (for EPM-06/06C/06CS)

Energize the device after implementing the connections respected to the user manual.
Enter the proper menu settings in order to correct measurements and applications.

Current Transformer Ratio Setup:

In this menu, current transformer ratio is set between 1 - 2000. (This menu is not available in the devices which are adapted with CT-25.)

Note: If the current transformer is not used between the system and device, current transformer ratio is entered as "1".

Example: If a current transformer which has a ratio of 30/5A is used between the system and device;

Current transformer ratio is entered as = 30/5 = 6.
Press SET button for 3 sec. (trA Fo menu is displayed)

Press SET button; trA Fo Cr menu is displayed (In CT-25 adapted devices trA Fo or Con nEC in menu can be displayed by scrolling the UP/DOWN buttons.)

Press SET button. Blinking the first digit of displayed value appears. ("trA Fo Ur" or "Con nEC to n" menu can be programmed similarly.)

Enter the blinking digit value by scrolling UP/DOWN buttons. Switch to the other digits by using SET button, use ESC button to go to previous digit. After you entered the last digit press SET button. trA Fo Cr is displayed. (Data is entered but is not activated yet. For activating the new data please follow the below steps).

Press ESC button one by one until "SAU E SET yes" is displayed.

Press SET button. When "SAU E SET yes" is displayed (If you press ESC button too much, "no" option instead of "yes" then new data will be cancelled and previous value will be activated).

Programming the Turn Number:

This menu is available for CT-25 adapted devices. User defines the turn number, which is the number of how many tour the current cable has rounded into the CT-25. Numbers can be selected between 1-20. Greater the number means greater the sensitivity.

trn	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
tr min(A)	2.00	1.00	0.66	0.50	0.40	0.33	0.28	0.24	0.20	0.18	0.16	0.15	0.14	0.13	0.12	0.11	0.10	0.10	0.10	
tr max(A)	120	60	40	30	24	20	17.1	15.0	13.3	12.0	10.9	10.0	9.23	8.57	8.00	7.50	7.05	6.66	6.31	

Voltage Transformer Ratio:

In this menu, voltage transformer ratio is set between 0,1 - 4000,0. **Note:** If the voltage transformer is not used between the system and EPM-06, voltage transformer ratio is entered as "1".

Example: If a voltage transformer which has a ratio of 34.5KV/100V is entered as 345, (34500/100)

Selecting the Connection Type :

Connection can be selected as Star or Delta in this menu.

Phase-Neutral voltage monitoring can be implemented if the "Star" connection is selected.

Phase-Phase voltage monitoring can be implemented if the "Delta" connection is selected.

NOTE: When the "Delta" connection is selected, "neutral current monitoring" can not be implemented even if it is activated and displaying function of ESC button will be disabled also.

User Password Setup:
In this menu user password is defined and activated. You must define and activate a 4 digit user password for preventing device settings from the illegal usage.

There are 2 sub menu in the Pm menu,

Activating the user password :
This menu is used for activating the user password.

After defining password is activated for entering to the menus; If the button is pressed for 3 sec., while the instant values are observed, user password is required. If the user password is entered wrong device does not latch.

Note: Factory default value of user password is "0000"



To activate the user password; in measurement mode Press SET button for 3 sec. (trA Fo menu is displayed)

Find the "Pm" menu by scrolling UP/DOWN buttons.

Press SET button (Pm Act IUA IE is displayed.)

Press SET button, Blinking the first digit of displayed value appears.

Enter the blinking digit value by scrolling UP/DOWN buttons. Switch to the other digits by using SET button, use ESC button to go to previous digit. After you entered the last digit press SET button. "Pm Act IUA IE" can be selected by scrolling UP/DOWN buttons. (Data is entered but is not activated yet. For activating the new data please follow the below steps).

Press ESC button one by one until "SAU E SET yes" is displayed.

Press SET button, When "SAU E SET yes" is displayed. (If you press ESC button or choose "no" option instead of "yes" then new data will be cancelled and previous value will be activated).

Changing of User Password:
This menu is used for changing the user password.

Note: Factory default value for user password is "0000"

To change the user password; in measurement mode Press SET button for 3 sec. (trA Fo menu is displayed)


Find the "Pm" menu by scrolling UP/DOWN buttons.

Press SET button (Pm Act IUA IE is displayed.)

Find the "Pm CHA n9E" menu by scrolling UP/DOWN buttons.

MULTIMETER

EM-06 / 06C / 06CS

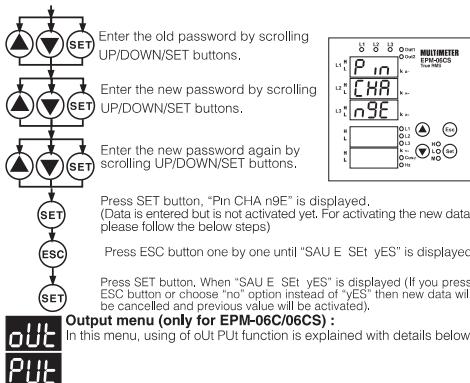

oUt Put

Out Relay function:
In this menu high-low or voltage-current monitoring is determined for Out1 and Out2 outputs.

Note: When U-I (voltage-current) is selected; Out2 is monitoring according to high or low voltage, frequency values and phase sequence, Out1 is monitoring according to high or low-current value.

When H-L (high-low) is selected; Out2 is monitoring according to high values for voltage, frequency and low-current, Out1 is monitoring according to low values for voltage or current.

Please refer to page 8 for a summary of the contact operations.

oUt Lat

If the Latch function is turned **on**:
OUT1-OUT2 outputs, which are released when a failure has occurred, keep remained at its position even if the failure is over. Press button in order to triggering the relay when the failure situation is removed.

If the Latch function is turned **off**:

Released outputs triggered at the end of delay off time when the failure situation is removed.

oUt Inv

If "oUt inU ErS" function is selected **off**:
Device is started with closed output contacts (out1, out2) in the normal network conditions according to settings.
Otherwise devices started with open position of the contacts.
Default setting is "**off**".

oUt Ers

Press SET button for 3 secs. (trA Fo menu is displayed).

Find oUt PUT menu by scrolling UP-DOWN buttons.

Press SET button oUt rEL AY / oUt Lat CH / oUt inU ErS are displayed.

Press SET button, U-I blinks in 4th display, (oFF blinks for oUt Lat CH and oUt inU ErS)

Select U4 or H-L by scrolling UP/DOWN buttons. (Select **on** or **oFF** for "oUt Lat CH" and "oUt inU ErS")

Press SET button, oUt rEL AY is displayed. (Data is entered but is not activated yet. Activating the new data, please follow the below steps)

Press ESC button by one until "SAU E SET yES" is displayed.

Press SET button, When "SAU E SET yES" is displayed (If you press ESC button or choose "no" option instead of "yES" then new data will be cancelled and previous value will be activated).

SP CUr rnt

Programming "SP CUr rnt":
Using purposes of submenus of "SP CUr rnt" explained below with details.

In case of using the device for measuring the current values of motors etc., start delay (AUto rSt) function can be used for preventing the equipment against the improper tripping, which is because of the demurrage current. If the system current decreases 50mAxCtr then start-up delay is resetted and related output detect the system automatically. This feature must be observed in case of using this function.

SP CUr H

In this menu, high set points for current values are programmed. H values for IL1, IL2, IL3 and IN can be entered one by one, If all the current values are under the Hr value; Out1 output is switched on, LED of Output1 turned **on** and LED of H turned **off**.

If any current (IL1, IL2, IL3 and IN) exceeds the high set value, H LED blinks, Output 1 output switches off at the end of the defined time (Hr on dEL), Output 1 turned **off** and H LED turned **on** continuously.

If all currents (IL1, IL2, IL3 and IN) are below the high set value (Hr off dEL), Output 1 output (CUR Hr dEL), output 1 LED turned on at the end of the defined time (Hr off dEL), output 1 LED turned **on** and H LED turned **off**.

This menu has 7 sub menus,
CUR Hr L-1, CUR Hr L-2, CUR Hr L-3, CUR Hr L-n, CUR Hr Hs, CUR on dEL, CUR off dEL

Note: High Current values are programmed for IL1, IL2, IL3 and IN separately but CUR Hr Hs (hysteresis), Hr on dEL (delay on time) and Hr off dEL (delay off time) values are common and they have same values for IL1, IL2, IL3 and IN.

SP CUr Lo

In this menu, low set points for current values are programmed. Lo values for IL1, IL2, IL3 and IN can be entered one by one. If all the current values are over the Lo value; Out1 output is switched on, LED of Output1 turned **on** and LED of L turned **off**.

If any current (IL1, IL2, IL3 and IN) exceeds the low set value, L LED blinks and Output 1 output switches off at the end of the defined time (Lo on dEL), Output 1 LED turned **off** and L LED turned **on** continuously.

If all currents (IL1, IL2, IL3 and IN) are over the low set value (Lo) as a hysteresis current (CUR Lo Hs), output 1 output switches on at the end of the defined time (Lo off dEL), output 1 LED turned **on** and L LED turned **off**.

This menu has 7 sub menus,
CUR Lo L-1, CUR Lo L-2, CUR Lo L-3, CUR Lo L-n, CUR Lo Hs, CUR on dEL, CUR off dEL

Note: Low Current values are programmed for IL1, IL2, IL3 and IN separately but CUR Lo Hs (hysteresis), Lo on dEL (delay on time) and Lo off dEL (delay off time) values are common and they have same values for IL1, IL2, IL3 and IN.

CUr In this menu, max. current value for IL1 is programmed; The current value can be programmed between: 0,001...5,000 A (Ctr = 1).

H 000,1...120,0 A (for CT-25 adapted device trn=1), The current value is required for high current warning L-1 (CUR L-1 and CUR Hr L-1 are programmed similarly). Refer "SP Cur Lo" for details.

CUr In this menu, min. current value for IL1 is programmed. The current value can be programmed between: 0,001...5,000 A (Ctr = 1).

Lo 000,1...120,0 A (for CT-25 adapted device trn=1), If the value is set to 0, then the low current warning L-1 (CUR L-1 and CUR Hr L-1 are programmed similarly). Refer "SP Cur Lo" for details.

CUr In this menu, required hysteresis current for high current warning is programmed. (same for IL1, IL2, IL3 and IN)

H The current value can be programmed between: 0,001...2,500 A (Ctr = 1)

Hys 000,1...60,0 A (for CT-25 adapted device trn=1) Refer "SP Cur H" for details.

CUr In this menu, required hysteresis current for low current warning is programmed. (same for IL1, IL2, IL3 and IN)

Lo The current value can be programmed between: 0,001...2,500 A (Ctr = 1)

Hys 000,1...60,0 A (for CT-25 adapted device trn=1) Refer "SP Cur Lo" for details.

H Delay time for activating the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL Delay time for activating the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

Lo The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

Lo Delay time for the pulse for releasing the output for low current warning. It is common for all currents (IL1, IL2, IL3 and IN)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)

H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

on The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur H" for details.)

dEL The value can be programmed between 000,0 and 999,9 in terms of seconds. (Refer "SP Cur Lo" for details.)


H Delay time for the pulse for releasing the output for high current warning. It is common for all currents (IL1, IL2, IL3 and IN)

oFF The value can be programmed between 000

MULTIMETER

EM-06 / 06C / 06CS

Programming the "SP CUR Hi", "SP CUR Lo", "SP UoL Hi" and "SP UoL Lo".

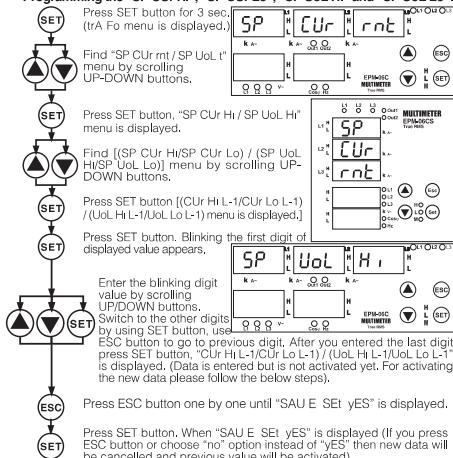

Press SET button. When "SAU E SET yES" is displayed (If you press ESC button or choose "no" option instead of "yES" then new data will be cancelled and previous value will be activated).

Start-up delay:


Start Delay Time is used to prevent from faulty switchings caused by motor start-up current (demurrage current). Out1 remain switched ON in this time period (When U-I is selected); In this time period, even if the current value exceeds the limits device doesn't sense it as a warning. This device doesn't give a warning even if the current value isn't in the setting interval.

This function is used with "Auto Reset" function.

RUE
O
rSt

Auto Reset Function :
If **Auto Reset** function is selected as ON; Each time that the current decreases "50mAxCtr" value, start-up delay time is reset and when the current value increases "50mAxCtr", start-up delay function is activated.
If **Auto Reset** function is selected as OFF; If the power supply is switched off and then switched on, start-up delay function is activated.

Please refer to below graphics for the operating principle of STA rt dEL and Aut o rSt functions

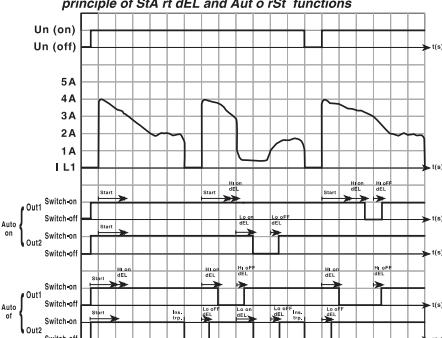


Instant Tripping Function.

At position **ON**, if any phase current (I1L1, I1L2, I1L3 and IN) exceeds 1.5 times of high (CUR Hi L-1, L-2, L-3, IN) values, the "current output" switches **off** instantly, output LED turned **off** and L LEDs for related currents turned **on**. (Please refer to "Output").

At position **OFF**, instant tripping function is cancelled.

Programming "CUR inS trP", "AUt o rSt" and "UoL inS trP"

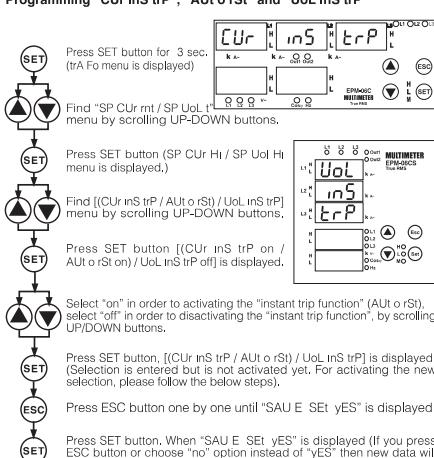

Programming "SP UoL t" :

Using purposes of submenus of "SP UoL t" explained below with details.

SP
UoL
t

In this menu, high set points for voltage values are programmed. Hi values for Phase-Neutral / Phase-Phase (according to Star / Delta selection) can be entered one by one.

SP
UoL
H

If all the voltage values (Phase-Neutral / Phase-Phase) are under the Hi value; related relay is switched on, its LED turned **on** (please refer "Output") and related H LEDs are turned **off**.

If all the voltage values (Phase-Neutral / Phase-Phase) are over the Hi value, H LED blinks and related output is switched off at the end of "delay on time" (Hi on dEL), its LED turned **on** (please refer "Output") and related H LEDs are turned **on**.

If all voltage (Phase-Neutral / Phase-Phase) are below the high set value (Hi) as a hysteresis voltage (UoL Hi HyS), related output is switched on at the end of the "delay off time" (Hi off dEL), its LED turned **on** (please refer "Output") and H LED is turned **off**.

Note: High Voltage values are programmed for (Phase-Neutral / Phase-Phase) separately but "UoL Hi HyS" (hysteresis) and "Hi on dEL" (delay on time) and "Hi off dEL" (delay off time) values are common; these parameters have same values for Phase-Neutral / Phase-Phase.

When Connection type (Star/Delta) is selected (refer to Connection menu), device will change the UoL Hi L-1, L-2 and L-3 values automatically according to connection.

Example : If the connection type is selected as Star (with neutral); UoL Hi HyS=10V UoL Hi L-1=250V, UoL Hi L-2=255V, UoL Hi L-3=260V and then this connection type is selected as Delta (without neutral), device will change the values after calculated them according to Phase-Phase values. New values:

UoL Hi L-1 (L1-L2 Phase to phase voltage) = 433 V
UoL Hi L-2 (L2-L3 Phase to phase voltage) = 441 V
UoL Hi L-3 (L3-L1 Phase to phase voltage) = 450 V
UoL Hi HyS = 10 V.

There are 6 submenus.
UoL Hi L-1, UoL Hi L-2, UoL Hi L-3, UoL Hi HyS, Hi on dEL, Hi off dEL.

MULTIMETER

EPM-06 / 06C / 06CS

SP
UoL
Lo

In this menu, low set points for voltage values are programmed. Lo values for Phase-Neutral / Phase-Phase (according to Star / Delta selection) can be entered one by one.

If all the voltage values (Phase-Neutral / Phase-Phase) are over the Lo value; related output is switched **on**, and related L LED turned **on** (please refer "Output") and related L LEDs are turned **off**.

If any of the voltage values (Phase-Neutral / Phase-Phase) decrease the Lo value, L LED blinks and related output is switched **off** at the end of "delay on time" (Lo on dEL), its LED turned **off** (please refer "Output") and related L LED is turned **on** continuously.

If all voltage (Phase-Neutral / Phase-Phase) values increase the low set value (Lo) as a hysteresis voltage (UoL Lo HyS), related relay is switched **on** at the end of the "delay off time" (Lo off dEL), its LED turned **on** (please refer "Output") and L LED is turned **off**.

Note: Low voltage values are programmed for (Phase-Neutral / Phase-Phase) separately but "UoL Lo HyS" (hysteresis), "Lo on dEL" (delay on time) and "Lo off dEL" (delay off time) values are common; these parameters have same values for Phase-Neutral / Phase-Phase.

When Connection type (Star/Delta) is selected (refer to Connection menu), device will change the UoL Lo L-1, L-2 and L-3 values automatically according to connection.

Example : If the connection type is selected as Star (with neutral); UoL Lo HyS=10V
UoL Lo L-1=180V, UoL Lo L-2=175V, UoL Lo L-3=170V and then this connection type is selected as Delta (without neutral), device will change the values after calculated them according to Phase-Phase values.

New values:

UoL Lo L-1 (L1-L2 Phase to phase voltage) = 311 V
UoL Lo L-2 (L2-L3 Phase to phase voltage) = 303 V
UoL Lo L-3 (L3-L1 Phase to phase voltage) = 294 V
UoL Lo HyS = 10 V.

There are 6 submenus.

UoL Lo L-1, UoL Lo L-2, UoL Lo L-3, UoL Lo HyS, Lo on dEL, Lo off dEL.

UoL
H
L - I

High value for L1, when the Star is selected; high value for L1-L2, when the Delta selected can be defined in this menu.

0....300 for Star connection and 0....500 for Delta connection can be defined.

If the value is set to zero (0), the high voltage warning is disabled. Refer "SP UoL Hi" for details.

Note: L2 and L3 phases can be programmed similarly.

Low value for L1, when the Star is selected; low value for L1-L2, when the Delta selected can be defined in this menu.

0....300 for Star connection and 0....500 for Delta connection can be defined.

If the value is set to zero (0), the high voltage warning is disabled. Refer "SP UoL Lo" for details.

Note: L2 and L3 phases can be programmed similarly.

(Refer to Page-4 for SP CUR Hi, SP CUR Lo, SP UoL Hi ve SP UoL Lo)


UoL
H
YHS

In this menu, required hysteresis voltage for high voltage warning is programmed. (same for Phase-Neutral/Phase-Phase.) 0....200V for Star connection and 0....200V for Delta connection can be defined. Refer "SP UoL Hi" for details.

UoL
Lo
YHS


In this menu, required hysteresis voltage for low voltage warning is programmed. (same for Phase-Neutral/Phase-Phase.) 0....200V for Star connection and 0....200V for Delta connection can be defined. Refer "SP UoL Lo" for details.

Programming the "U-H HyS", "U-L HyS", "I-H HyS", "I-L HyS"

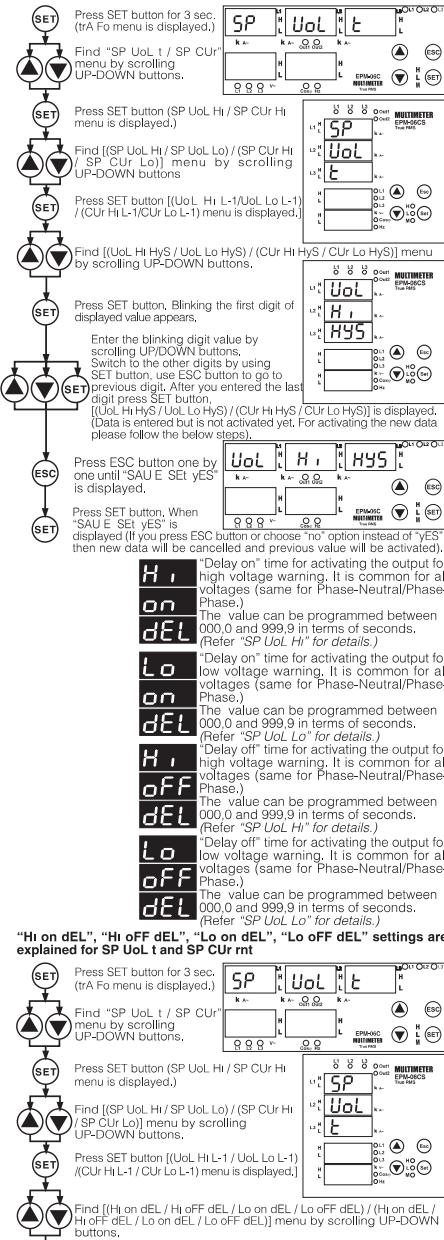

MULTIMETER

EM-06 / 06C / 06CS

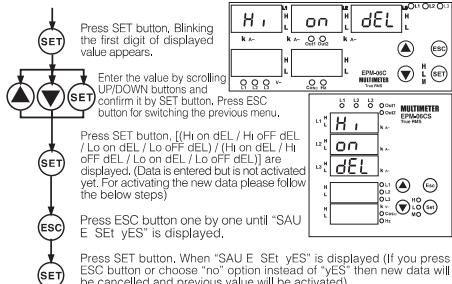

FRE Setpoints for Frequency :

In this menu, Frequency range can be defined according to High and Low values of Frequency measurement.

If the frequency of the system decreases the Freq Hi value; output is switched on and LED is turned on. (Refer to Output menu) and H LED for frequency is turned off.

If the frequency of the system exceeds the high set value, H LED relating to frequency blinks, output switched off at the end of defined time (Freq on dEL), LED turned off (Refer to Output menu) and H LED for frequency is turned on continuously.

If the frequency of system are under the high set value (Freq Hi) as a hysteresis (Freq Hi Hys), output is turned on at the end of defined time (Freq off dEL), LED is turned on and H LED is turned off, at the end of the adjusted time (Freq off dEL), output1 LED turns on and Hi LEDs turn off.

If the frequency of the system is over the low set value (Freq Lo), output is turned on, LED is turned on L LED is turned off.

If the frequency of the system decreases the low set value (Freq Lo), L LED blinks; output is turned off at the end of defined time (Freq ond), LED is turned off and L LED is turned on continuously.

If the frequency of the system is over the low set value (Freq Lo Hys) as a hysteresis (Freq Hys), output is turned on at the end of defined time (Freq off DEL), LED is turned on and L LED is turned off.

Note: System frequency is measured for L1.

There are 6 submenus.

Freq Hi, Freq Lo, Freq Hi Hys, Freq Lo Hys, Freq on dEL, Freq off dEL.

Freq Max. value for system frequency, this value can be defined between 0...70.00 Hz. If the value is set to zero (0), the high frequency warning is disabled.

Hi Min. value for system frequency, this value can be defined between 0...70.00 Hz. If the value is set to zero (0), the low frequency warning is disabled.

HYS Note: Attention for common using of output and relay LED for voltage.

Freq In this menu, required hysteresis value can be defined between 0...20.00 Hz, in order to switching off the "high frequency" warning.

Lo

HYS In this menu, required hysteresis value can be defined between 0...20.00 Hz, in order to switching off the "low frequency" warning.

Freq Delay-on time for activation of alarm for high and low frequency value.

This value can be defined between 000.0..999.9 in term of second.

dEL

Freq Delay-off time for deactivation of alarm for high and low frequency value.

This value can be defined between 000.0..999.9 in term of second.

dEL

Phase sequence can be turned on/off in this menu. Inversed phase voltage which is applied to the measurement inputs (L1-L2-L3), can be monitored. Default setting is off. In order to let the device to warn user in case of inverted phase situation please change the off position as on in "UoL PHS Seq" menu. Phase sequence function is disabled if the selection is selected off.

L1, L2 and L3 LEDs blink and output output released immediately when "UoL PHS Seq" is turned on and phase sequence is inverted with any reason.

Note: Output 2 is used if U4 is selected and Output1 is used if H-L is selected in Output menu for the Phase Sequence monitoring.

Instant Tripping Function.

At position ON, if any VL-VL VL-NL values exceeds 1.5 times of high voltages (UoL H1-J1/2/L-3) values, the "voltage output" switches OFF instantly, output LED turned OFF and H LED, for related voltage, is turned ON. (Please refer to "Output".)

If any phase voltage decrease 0.5 times low voltages (UoL L1-L2/L-3), the "voltage output" switches OFF instantly, output LED turned OFF and Lo LED, for related voltage, is turned ON. (Refer to Page-4 for "CUR inS trP", "AUT rSt" and "UoL inS trP")

rES Reset function.

In this menu, values of min., max., demand are erased. It saves the instantaneously measured min. and max. values of the device into its memory. Please kindly look at to the section of functions of buttons for min. and max. values.

Note: Measured electrical parameters which are saved to the memory are not affected from the electric interruptions. In the rES Et HL or rES Et dE menu, when you choose yES and quit from all menus, if you confirm the changes, min. and max. demand values of all parameters are erased at the same time.

Press SET button for 3 sec. (trA Fo menu is displayed.)

Find rES Et menu by scrolling UP-DOWN buttons.

Press SET button (rES Et dE menu is displayed.)

Find rES Et dE / rES Et HL menu by scrolling UP-DOWN buttons.

Press SET button ("rES Et dE no" is displayed.)

By using the UP-DOWN buttons, other parameters can be selected. If you want to delete the value, choose yES, if not choose no.

Press SET button, rES Et dE / rES Et HL is displayed. (Data is entered but is not activated yet. Activating the new data, please follow the below steps)

Press ESC button one by one until "SAU E SET yES" is displayed.

Press SET button, When "SAU E SET yES" is displayed (If you press ESC button or choose "no" option instead of "yES" then new data will be cancelled and previous value will be activated).

dE Demand Time.

Max. Demand time can be defined between 01-60 minute in this menu.

Press SET button for 3 sec. (trA Fo menu is displayed.)


Find dE menu by scrolling UP-DOWN buttons.

Press SET button, Blinking the first digit of displayed value appears.

Enter the blinking digit value by scrolling UP/DOWN buttons. Switch to the other digits by using SET button, use ESC button to go to previous digit. After you entered the last digit press SET button, "dE t" is displayed. (Data is entered but is not activated yet. For activating the new data please follow the below steps).

MULTIMETER

EM-06 / 06C / 06CS

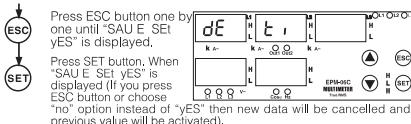


Serial Communication (for EPM-06CS)

EPM-06CS have MODBUS RTU communication protocol which is optical isolated. All measured parameters can be transfer to the computer. Transformer ratios and communication parameters can be set. Saved values can be reset.

Programmed parameter for communication explained below.


Press SET button 3 sec. (trA Fm menu is displayed.)

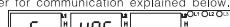


Find RS-485 menu by scrolling UP/DOWN buttons,



Press SET button (Adr ESS menu is displayed.)

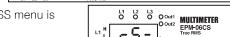

Find "Adr ESS / bAU d / PArty" menu by scrolling UP-DOWN buttons.

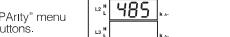

Press SET button ("001 / 9600 / no" menu is displayed.)



Enter the parameter values by scrolling UP/DOWN buttons (001...247 / 2400...38400 / no, EUEn, odd).

Press SET button, "Adr ESS / bAU d / PArty" is displayed. (Data is entered but is not activated yet. For activating the new data please follow the below steps)

Press ESC button one by one until "SAU E SET yes" is displayed.

Press SET button, When "SAU E SET yes" is displayed (If you press ESC button or choose "no" option instead of "yes" then new data will be cancelled and previous value will be activated).

MODBUS RTU PROTOCOL (Available only for EPM-06CS)

Standard MODBUS RTU message is shown below.

T	ADDRESS 8 BIT	FUNCTION 8 BIT	DATA NxBIT	CRCH	CRCL	T
---	------------------	-------------------	---------------	------	------	---

The T times corresponds to a time in which data must not be exchanged on the communication bus to allow the connected devices to recognize the end of one message and the beginning of another. This time must be at least 3.5 characters at the maximum baud rate. Address range (1-247) = address of the connected device. The data field contains data sent to the slave by master or data sent to master by slave.

CRC is a error check method by using MODBUS RTU protocol and consists of 2 bytes.

Available Modbus Function:

03H	READ HOLD REGISTERS
06H	PRESET SINGLE REGISTER
10H	PRESET MULTIPLE REGISTERS

Read Hold (03) function is used for reading measured values and set value. If any request of reading of a register, excepted mentioned in register table, device will send an error message.

For example to read phase1 voltage by sending a message to the device.

01 00 00 00 00 02 XX XX

01 Device address

03 Function

00 MSB address

00 LSB address

00 Register number MSB

02 Register number LSB

XX CRC MSB

XX CRC LSB

Preset Single Register (06) function is used for writting the setting values, erasing the energy counter or resetting the min., max., max. demand values. Current transformers ratio can be set 0-2000, voltage transformer ratio can be set 1-4000.

i.e. Setting CT as 100; Ut as 20;

01 06 80 00 02 64 XX XX

01 Device address

06 Function

80 MSB address

02 LSB address

00 Data MSB

01 Data LSb

XX CRC MSB

XX CRC LSB

Preset Multiple Register (10H) is used to set more than one register at same time,

i.e. Setting CT as 100, Ut as 20;

01 10 80 00 02 04 00 C8 00 64 XX XX

01 Device Address

10 Function

80 MSB address

00 LSB address

00 Register number MSB

02 Register number LSB

04 Byte count

00 Data MSB

08 Data LSb


64 Data MSB

XX CRC MSB


XX CRC LSB

EPM-06CS COMPUTER CONNECTION

31 DEVICES CAN BE CONNECTED AT THE SAME LINE

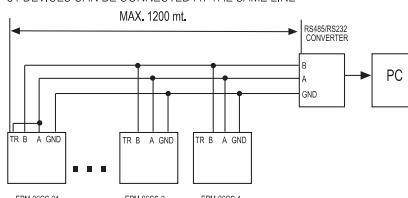

MAX. 247 DEVICES CAN BE CONNECTED AT SAME LINE BY USING REPEATER.

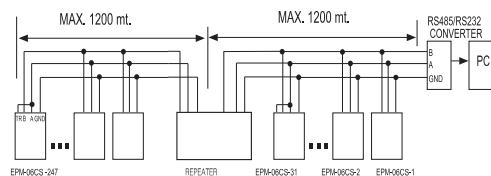

Technical Features

Rated Voltage (Ur) : Please look at back side of the device.

Operating Frequency (f) : 45-65 Hz

Max. Power Consumption : < 4 W

Measuring Input Power Consumption : < 1 VA

Measurement ranges

Current : 0.05-5.5A~

Voltage : 2 - 120 VAC for CT-25

Power (for EPM-06CS) : 10-3000 W AC (Phase - Neutral)

Power (V AC) (Phase - Phase) : 300-3000 V AC

Current Transformer Ratio : 1±1% digit [(10%-100%) x full scale]

Class : 1 ... 2000

Current Transformer Adapted : 1 ... 20

Turn number for CT-25 adapted models : 1 ... 4000, 0

Voltage Transformer Ratio : 40,000

Max. Chr x Vt : MODBUS RTU (RS 485)

Communications (for EPM-06CS) : Opto isolated, programmable

Baud Rate (for EPM-06CS) : 2400-38400 bps

Address (for EPM-06CS) : 1-247

Parity (for EPM-06CS) : No, Odd, Even, 8 Data Bits, 2 Stop Bits

Output Relays (for EPM-06C/06CS) : 2/10, 6A 250 V

Ambient Temperature : -5°C to +50°C

Display : Red LED display

Dimensions : PR-19, PK-26

Equipment Protection Class : Double Insulation - Class II (II)

Box Protection Class : IP 40

Terminal Protection Class : IP 00

Box Material : Non-flammable

Mounting : Panel Mounted (PR-19)

Wire Crosssection (for terminals) : Rail Mounted (PK-26)

Weight : 2.5 mm²

Mounting Category : 0.56 kg (PR-19)

Panel Size : 0.52 kg (PK-26)

Panel Size : 91x81 mm (PR-19)

Panel Size : 46x107 mm (PK-26)

Default Settings

.../5A type

Ctr - 0001 CUR Hi L-1 - 5.000

Utr - 0001 CUR Hi L-2 - 5.000

trn - 01 CUR Hi L-3 - 5.000

ConnEC - SiTr CUR Hi L-n - 5.000

CUR Hi Hys - 0.100

Cur Lo dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 010.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 0.200

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 010.0

Auto reset - off

Cur ins trp - off

Out relay - LH

Latch - off

Out Inverse -

bAUD - 9600

Addres - 001

ParTy - no

dt - 15

UoL Hi L-1 - 250

UoL Hi L-2 - 250

UoL Hi L-3 - 250

UoL Hi L-n - 250

UoL Hi Hys - 0.010.0

Frq Hi Hys - 0.010.0

Lo on dEL - 003.0

Lo off dEL - 003.0

Frq Lo Hys - 0.010.0

Frq on dEL - 003.0

Frq off dEL - 003.0

UoL Lo L-1 - 180

UoL Lo L-2 - 180

UoL Lo L-n - 180

Frq Hi - 63

Frq Lo - 47

Frq on dEL - 010.0

Frq off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0

Si Art dEL - 000.0

Auto reset - off

Cur ins trp - off

Ctr Lo L-2 - 0.000

CUR Lo L-3 - 0.000

CUR Lo L-n - 0.000

CUR Lo Hys - 2.000

Lo on dEL - 010.0

Lo off dEL - 010.0



Si Art dEL - 000.0

Auto reset - off


MULTIMETER

EPM-06 / 06C / 06CS


Dimensions

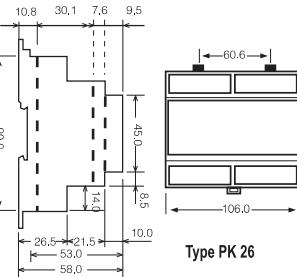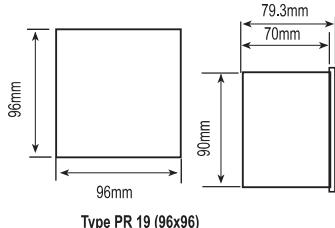

Panel Cut-out

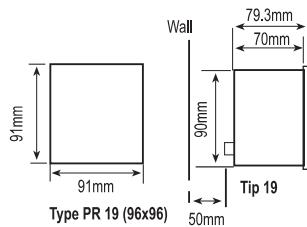

Connection Diagram

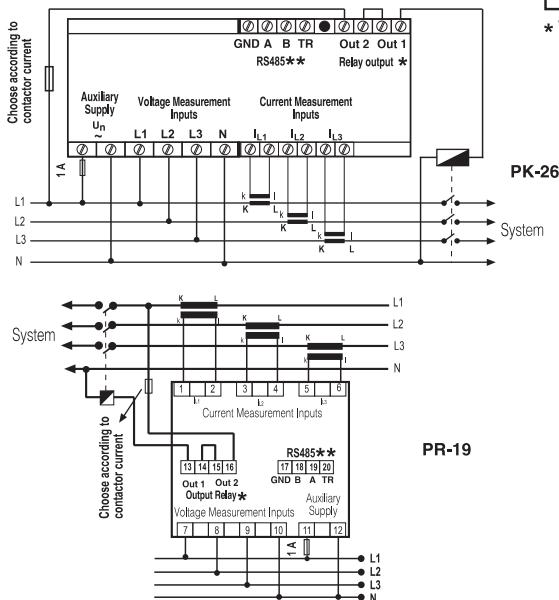

* Available only for EPM-06C/06CS

** Available only for EPM-06CS

Note: For CT-25 models:

- I: When CT-25 is used, Red cable is connected to k terminal,
- I: When CT-25 is used, Black cable is connected to l terminal.

Summary of the Contact Operations *

ALTERNATIVE 1 (U-I)

Current -->	Under/Over
-------------	------------

Out 1

Voltage -->	Under/Over
Frequency-->	Under/Over
Current -->	Under/Over

Out 2

ALTERNATIVE 2 (H-L)

Voltage-->	Over
Frequency-->	Over
Current -->	Over

* Valid for EPM-06C/06CS

MODBUS REGISTER TABLE

EPM-04CS / EPM-06CS

MODBUS REGISTER TABLE							MODBUS REGISTER TABLE							MODBUS REGISTER TABLE									
ADDRESS	ADDRESS (HEX)	REGISTER	R/W	RANGE	UNIT	MULTIPLIER	FORMAT	ADDRESS	ADDRESS (HEX)	REGISTER	R/W	RANGE	UNIT	MULTIPLIER	FORMAT	ADDRESS	ADDRESS (HEX)	REGISTER	R/W	RANGE	UNIT	MULTIPLIER	FORMAT
0	0002	L1 PHASE VOLTAGE	R	[0-3000]uV	Volt	0.1	unsigned int	152	0048	L1 PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	3102	8102	OUTPUT FUNCTION	R/W	-	-	short/int	
2	0002	L2 PHASE VOLTAGE	R	[0-3000]uV	Volt	0.1	unsigned int	154	0049	L2 PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	3103	8103	LATCHED FUNCTION	R/W	-	-	short/int	
4	0002	L3 PHASE VOLTAGE	R	[0-3000]uV	Volt	0.1	unsigned int	156	004A	L3 PHASE CURRENT	R	[0-3000]uCT	Ampere	0.001	unsigned int	3104	8104	OUTPUT INVERSE	R/W	-	-	short/int	
6	0006	L1 PHASE CURRENT	R	[0-3000]uCT	Ampere	0.001	unsigned int	160	0051	L1 PHASE CURRENT	R	[0-3000]uCT	Ampere	0.001	unsigned int	3105	8105	PHASE SOURCE MONITORING	R/W	-	-	short/int	
8	0008	L2 PHASE CURRENT	R	[0-3000]uCT	Ampere	0.001	unsigned int	162	0052	L2 PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	3106	8106	VOLTAGE INSTANT TRIP FUNCTION	R/W	-	-	short/int	
10	000A	L3 PHASE CURRENT	R	[0-3000]uCT	Ampere	0.001	unsigned int	164	00A4	L1 PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	3107	8107	CURRENT INSTANT TRIP FUNCTION	R/W	-	-	short/int	
12	000C	NEUTRAL CURRENT	R	[0-3000]uCT	Ampere	0.001	unsigned int	166	00A5	L2 PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	3108	8108	AMPERE INSTANT TRIP	R/W	-	-	short/int	
14	000E	L1,2 PHASE-PHASE VOLTAGE	R	[0-3000]uV	Volt	0.1	unsigned int	168	00A6	L3 PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	3109	8109	STARTUP TIME	R/W	0-9999	Second	0.1	short/int
16	0015	L1,2,3 PHASE-PHASE VOLTAGE	R	[0-3000]uV	Volt	0.1	unsigned int	170	00A7	L1,2,3 PHASE-PHASE VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	310A	810A	L1,HIGHVOLAGE WARNING	R/W	-	-	short/int	
18	0017	L1,2,3 PHASE-PHASE VOLTAGE	R	[0-3000]uV	Volt	0.1	unsigned int	172	00AC	L1,2,3 PHASE-PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	310B	810B	L1,HIGHVOLAGE TRIP WARNING	R/W	-	-	short/int	
20								174	00AE	L1,2,3 PHASE-PHASE MAX VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int	310C	810C	L1,HIGHVOLAGE WARNING	R/W	-	-	short/int	
22								176	00B0	L1 PHASE MAX CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int	310D	810D	L1,HIGHVOLAGE TRIP WARNING	R/W	-	-	short/int	
24								178	00B2	L2 PHASE MAX CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int	310E	810E	L1,HIGHVOLAGE WARNING	R/W	-	-	short/int	
26								180	00B4	L3 PHASE MAX CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int	310F	810F	L1,HIGHVOLAGE TRIP WARNING	R/W	-	-	short/int	
28								182							310G	8110	LN HIGHCURRENT WARNING	R/W	-	-	short/int		
30								184							310H	8111	LN HIGHCURRENT TRIP WARNING	R/W	-	-	short/int		
32								186															
34								188															
36								190															
38	0006	L1 PHASE COSφ *	R	[0-1000-1000]	-	0.001	int	191															
40	0008	L2 PHASE COSφ *	R	[0-1000-1000]	-	0.001	int	192															
42	002A	L3 PHASE COSφ *	R	[0-1000-1000]	-	0.001	int	194															
44								196															
46								198															
48								200															
50								202															
52								204															
54	0038	AVERAGE INDUCTIVE COSφ *	R	[0-1000-1000]	-	0.001	int	206															
56	0039	AVERAGE CAPACITIVE COSφ *	R	[0-1000-1000]	-	0.001	int	208															
58	003A	FREQUENCY	R	[4000-7000]	Hz	0.01	unsigned int	210	0002	L1 PHASE MAX CURRENT DEMAND	R/W	[0-4000]uCT	Ampere	0.001	unsigned int	310G	8116	L1LOW2/0TRIP WARNING	R/W	-	-	short/int	
60	0003	L1 PHASE VOLTAGE ANGLE *	R	[0-3600]	Degree	1	unsigned int	212	0004	L2 PHASE MAX CURRENT DEMAND	R/W	[0-4000]uCT	Ampere	0.001	unsigned int	310H	8117	L1/HIGHVOLAGE WARNING	R/W	-	-	short/int	
62	0046	L1 PHASE VOLTAGE ANGLE *	R	[0-3600]	Degree	1	unsigned int	214	0036	L3 PHASE MAX CURRENT DEMAND	R/W	[0-4000]uCT	Ampere	0.001	unsigned int	310I	8118	L1LOW2/0TRIP WARNING	R/W	-	-	short/int	
64	0040	L1 PHASE VOLTAGE ANGLE *	R	[0-3600]	Degree	1	unsigned int	216								310J	8119	L1LOW2/0CURRENT WARNING	R/W	-	-	short/int	
66	0042	L1 PHASE CURRENT ANGLE *	R	[0-3600]	Degree	1	unsigned int	218								310K	8120	L1LOW2/0CURRENT TRIP WARNING	R/W	-	-	short/int	
68	0044	L2 PHASE CURRENT ANGLE *	R	[0-3600]	Degree	1	unsigned int	220								310L	8121	L1LOW2/0CURRENT WARNING	R/W	-	-	short/int	
70	0046	L3 PHASE CURRENT ANGLE *	R	[0-3600]	Degree	1	unsigned int	222								310M	8122	L1LOW2/0CURRENT TRIP WARNING	R/W	-	-	short/int	
72								224															
74								226															
76								228															
78								230															
80								232															
82								234															
84								236															
86								238															
88								240															
90								242															
92								244															
94								246															
96								248															
98								250															
100								252															
102								254															
104																							
106																							
108																							
110	0028	L1 PHASE MIN. VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int									310N	8123	L1HIGHLIGHT ADDRESS	R/W	0-255	short/int		
112	0028	L2 PHASE MIN. VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int									310O	8124	BALV RATE	R/W	0-255	short/int		
114	002A	L3 PHASE MIN. VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int									310P	8125	PARTY	R/W	0-2	short/int		
116	002C	L1,2,3 PHASE-MIN. VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int									310Q	800C	PASSWORD ENABLE	R/W	0-1	short/int		
118	0028	L1 PHASE MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310R	8126	PASSWORD	R/W	0-9999	short/int		
120	0028	L2 PHASE MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310S	8127	CONNECTION SELECTION	R/W	0-1	short/int		
122	007A	L3 PHASE MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310T	8128	BAUD RATE	R/W	0-14	short/int		
124	007C	L1,2,3 PHASE-MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310U	8129	1/4800 bps	R/W	0-2	short/int		
126	007E	L1,2,3 PHASE-MIN. VOLTAGE	R/W	[0-3000]uV	Volt	0.1	unsigned int									310V	8130	3-9600 bps	R/W	0-2	short/int		
128	007A	L1,2,3 PHASE-MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310W	8131	5,2400 bps	R/W	0-2	short/int		
130	0028	L1 PHASE MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310X	8132	0-16 bps	R/W	0-1	short/int		
132	0084	L2 PHASE MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310Y	8133	0-16 bps	R/W	0-1	short/int		
134	0086	L3 PHASE MIN. CURRENT	R/W	[0-4000]uCT	Ampere	0.001	unsigned int									310Z	8134	0-16 bps	R/W	0-1	short/int		
136																							
138																							
140																							
142																							
144																							
146																							
148																							
150																							

BAUD RATE 1-8: PARITY 4-2: CONNECTION SELECTION 6-1:

0-No 1-Even 2-Odd 3-odd 4-Even

5-Even 6-Even 7-Even 8-Even

9-Even 10-Even 11-Even 12-Even

13-Even 14-Even 15-Even 16-Even

17-Even 18-Even 19-Even 20-Even

21-Even 22-Even 23-Even 24-Even

25-Even 26-Even 27-Even 28-Even

29-Even 30-Even 31-Even 32-Even

33-Even 34-Even 35-Even 36-Even

37-Even 38-Even 39-Even 40-Even

41-Even 42-Even 43-Even 44-Even

45-Even 46-Even 47-Even 48-Even

49-Even 50-Even 51-Even 52-Even

53-Even 54-Even 55-Even 56-Even

57-Even 58-Even 59-Even 60-Even

61-Even 62-Even 63-Even 64-Even

65-Even 66-Even 67-Even 68-Even

69-Even 70-Even 71-Even 72-Even

73-Even 74-Even 75-Even 76-Even

77-Even 78-Even 79-Even 80-Even

81-Even 82-Even 83-Even 84-Even

85-Even 86-Even 87-Even 88-Even

DIGITALMULTIMETER

EPM-06 / 06C / 06CS

INDEX



Fortschrittsmaßnahmen für die Installation und ihre Verwendung.....	1
Vorschalt- und Taschenfunktionen.....	1
Allgemeine Informationen und Verwendungsziecke.....	1
Spezielle Taschenfunktionen.....	2
Fortschrittsanzeige (FC) im Urt / ConnEcion.....	2
Kennworteinstellungen (PIN Menu).....	2
Kennwortaktivierung (PIN Adt. Menus).....	2
PIN Change (PIN Menus).....	3
Relaisausgangseinstellung (Output).....	3
Stromeinspeisungseinstellung (SP Current Menu).....	3
Hochst-/Mindeststromeinstellungen (SP Cur Ht, Sp Cr Lo Menus).....	3
Spannungsstabilisierungen für Hochst-Mindeststrom (CU Ht/Hys, CU Lo/Hys Menus).....	3
Einschalterverzögerungseinstellungen für Hochst-Mindeststrom (Ht n dEL, Lo n dEL).....	3
Aussteuerverzögerungseinstellungen für Hochst-Mindeststrom.....	3
Ht n dEL Menus.....	3
Start und Auto Funktionen (STAR dEL und Auto IST Menus).....	4
Sofortige Auslösungsfunktion (CUR ins trP Menus).....	4
Spannungssteigerungsmenü (SP Vol. Menus).....	4
Spannungsabsenkungsmenü (SP Red. Menus).....	4
Hystereseeinstellungen für Hochst-/Mindestspannung (U1-Hys, U1-Lo Hys Menus).....	5
Einschaltverzögerungseinstellungen für Hochst-Mindestspannung (Lo n dEL, Lo dEL Menus).....	5
Einschaltverzögerungseinstellungen für Hochst-Mindestspannung (Ht n dEL, Lo off dEL Menus).....	5
F r e q u e n z m e n u	6
Hochst-/Mindestfrequenzeinstellungen (Fr1 Ht, Fr1 Lo Menus).....	6
Frequenzverzögerungseinstellungen für Hochst-Mindestspannung (Fr1-Hys, Fr1-Lo Hys Menus).....	6
Ein-/Ausschaltverzögerungseinstellungen für Hochst-/Mindestspannung (Frq on dEL, Frq off dEL Menus).....	6
Phasenfolge (Vol Sequence) Menü und sofortige Auslösungs menüs (UL ins trP Menus).....	7
Löschnung der max. min. und max. Bedarfswert (Resetmenu).....	7
Bedarfssatz für Bedarf min. und max. Bedarf (tr1 Menu).....	7
Kommunikationsmenü (RS485).....	7
Datenbank (HW-Konfiguration).....	7
Anschlussdatalogramme.....	8

Die Output SP Strom - Und Spannungsmenüs gelten für EPM-06C/06CS Geräte, wobei das RS-485 Menu nur für EPM-06CS Geräte gilt.

VORSICHTSMASSNAHMEN FÜR INSTALLATION UND SICHERE ANWENDUNG

**⚠ Bei allen CT-25-kompatiblen Geräten, bitte nur CT-25 Stromwandler
zur Stromeingangskonnektionen verwenden. Andere Arten von
Stromwandlern können das Gerät beschädigen.
Bei Nichteinhaltung dieser Anweisungen, kann es zu schweren
Verletzungen oder zum Tod führen.**

- Bitte jede Art von Energiezufuhr zum Gerät vor der Installation abbrechen.
 - Nachdem das Gerät an ein Netzwerk verbunden ist, die Frontplatte nicht mehr entfernen.
 - Das Gerät nur mit einem trockenen Tuch reinigen; bitte keine Lösungs-/Reinigungsmittel verwenden.
 - Bitte alle Anschlussverbindungen überprüfen.
 - Wartung und Reparatur von elektrischen Geräten sollten nur von Ihrem Fachhändler durchgeführt werden.
 - Das Gerät ist nur für Schalttafelmontage geeignet.
 - Für Stromsicherung nur Typ F verwenden; Stromgrenzwert muss 1 A sein.
 - Der Hersteller bzw. autorisierte Händler übernimmt keine Haftung für Folgen, die bei Nichteinhaltung der oben genannten Anweisungen entstehen können.

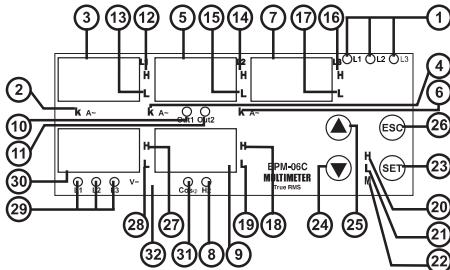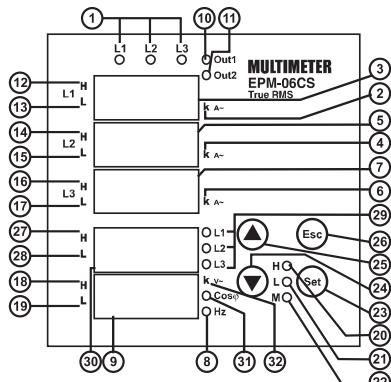

- 1.....Phasenexistenzleuchtdiode. Falls an einen Spannungseingang 30 V Spannung gelangt, leuchtet die Diode für die entsprechende Phase.

2.....Leuchtdiode für das erste Display (L 1 Eingang). Wenn diese Diode leuchtet, ist der gemessene Wert als Kilo angezeigt. Beispiel: KA, KV

3.....Display für den L 1 Eingang.

4.....Leuchtdiode für das zweite Display (**L 2 Eingang und Neutralstrom**). Wenn diese Diode leuchtet, ist der gemessene Wert als Kilo angezeigt. Beispiel: kA, KV

5.....Display für den L 2 Eingang und Neutralstrom

6.....K Leuchtdiode für das dritte Display (L 3 Eingang). Wenn diese Diode leuchtet, ist der gemessene Wert als Kilo angezeigt. Beispiel: ka, KV

7.....Display für den L 3 Eingang.

8.....Wenn diese Leuchtdiode leuchtet, zeigt das Gerät die Betriebsfrequenz.

9.....Display für Frequenz und Cos

10.....Leuchtdiode für den ersten Alarmausgang (Out1). Die Diode leuchtet beim Einschalten vom ersten Ausgang. (EPM-06C/06CS)

11.....Leuchtdiode für den zweiten Alarmausgang (Out2). Die Diode leuchtet beim Einschalten vom ersten Ausgang. (EPM-06C/06CS)

12.....Alarmausgang für Überstrom L1 (EPM-06C/06CS)

13.....Alarmausgang für Schwachstrom an L1 (EPM-06C/06CS)

14.....Alarmausgang für Über-/Neutralstrom an L2 (EPM-06C/06CS)

15.....Alarmausgang für Nieder-/Neutralstrom an L2 (EPM-06C/06CS)

16.....Alarmausgang für Überstrom an L3 (EPM-06C/06CS)

17.....Alarmausgang für Niederstrom an L3 (EPM-06C/06CS)

18.....Alarmausgang für Überfrequenz (EPM-06C/06CS)

19.....Alarmausgang für Unterfrequenz (EPM-06C/06CS)

20.....Max. Instantstrom und Instantspannung (**H**). Wenn diese Diode leuchtet, werden die max. Instantwerte für Strom und Spannung angezeigt.

21.....Min. Instantstrom und Instantspannung (**L**). Wenn diese Diode leuchtet, werden die min. Instantwerte für Strom und Spannung angezeigt.

22.....Leuchtdiode **M** für max. Bedarf. Beim Leuchten dieser Diode werden die max. Bedarfswerte am Display angezeigt.

23.....SET Taste. Wenn diese Taste im Überwachungsmodus für 3 Sekunden gedrückt wird, kommt man in den Programmiermodus. Im Überwachungsmodus wird sie zum Überwachen der max. (H)/min. (L) Werte und max. Bedarfswerte (nur für Strom) verwendet.

24.....AB Taste. Auch Übergangstaste zwischen Phasen.

25.....AUF Taste. Auch Übergangstaste zwischen Phasen.

26.....ESC Taste. Mit dieser Taste können Sie jegliche Menüs verlassen. Während die Sperrfunktion aktiv ist, wird sie auch verwendet, um das Relais von einem Alarmzustand zu befreien. (EPM-06C/06PM-06CS)

27.....Alarmausgang für Überspannung am vierten Display.

28.....Alarmausgang für Unterspannung am vierten Display.

29.....Alarmdioden für entsprechende Spannungswerte am vierten Display.

30.....Display für Phasenspannungswerte

31.....Diese Diode zeigt Cos -Werte an bei Aktivierung von L1, L2 oder L3 zur Messung der Spannungswerte (angezeigt am

4.....Display). Bei Aktivierung von L1+L2: zeigt den **Durchschnittswert von induktiven Cos** .. Bei Aktivierung von L2+L3: zeigt den **Durchschnittswert von kapazitiven Cos** ..

32.....Leuchtdiode **K** für angezeigte Phase am 4. Display.

Allgemeine Informationen und Verwendungszwecke

EPM-06C/06CS wurde entwickelt um Phasenströme, Neutralstrom, Spannung (L-L und L-N) und Frequenz eines dreiphasigen Netzwerkes zu messen.
EPM-04C/CS: Das Gerät hat zwei Alarmausgänge: Out1 und Out2 (NO-offen im Normalfall). Sehen Sie sich bitte im Menü unter "Output" für die Funktionen der Ausgänge.

DIGITALMULTIMETER

EPM-06 / 06C / 06CS

Folgende Anwendungen und Messungen können mit diesem Gerät durchgeführt werden:

- 1) Messung von Phasenströmen (IL), Neutralstrom (IN), Frequenz, Cos ..; Spannungen (L-L und L-N).
- 2) Überwachung der Phasenexistenz mit Leuchtdioden L 1, L 2, L 3.
- 3) Anzeige der min. und max. Strom- und Spannungswerte mit einer einzigen Taste.
- 4) Überwachung der max. Bedarfswerte für gemessene Ströme; Berechnung der Bedarfszeit im Menü (dt: demand time).
- 5) Durchführen von Spezialfunktionen bei der Geräteneinstellung durch Definieren und Aktivieren eines 4-stelligen Kennworts im PIN-Menü.
- 6) Veränderung des Stromwanderverhältnisses zwischen 1-2000, Einstellung der Windungszahl des Stromwandlers zwischen 1-20 für Modelle mit CT-25, Veränderung des Spannungswanderverhältnisses zwischen 0,1-4000.
- 7) Einstellung einer bestimmten Spanne für gemessene Ströme und Spannungen; Programmierung des Alarmausgänge OUT1 und OUT2, so dass diese aktiviert werden sobald die gemessenen Ströme und Spannungen diese Spanne verlassen und das Gerät aus dem Netz getrennt werden kann.
- 8) Verhinderung falscher Auslösungen um, Anlaufstrom mit der Startverzögerungsfunktion bei Strommessungen in Motoren.
- 9) Beibehaltung der Sperrfunktion (Latch) in Kontakten bei Netzfehlern, auch wenn die Fehler vom System entfernt werden (siehe: Latchmenü).

Die Anwendungen in 7, 8 und 9 sind nur gültig für EPM-06C/06CS

Tastenfunktionen:

Wenn das Gerät im Messmodus ist, können die unten angegebenen Tasten auch manche Spezialfunktionen durchführen.

- Diese Tasten zeigen Übergänge von Phasenspannungen am vierten Display an.
 Sie werden im Programmiermodus auch angewendet, um Einstellwerte und Parameter zu ändern.
 Mit dieser Taste können max. Bedarf, sowie min./max. Ströme und Spannungen überwacht werden. Der Programmiermodus wird aktiv, wenn die Taste für 3 Sekunden lang gedrückt wird. In diesem Modus ist man auch fähig, Veränderungen für die Parameter im Menü zu machen, bzw. spezifische Einstellungen vorzunehmen.
 In diesem Modus wird diese Taste benutzt, um Übergänge zwischen Neutralstrom und Phasenspannungen zu vornehmen. Um aus dem Programmiermodus wieder vorzuhören, müssen Sie die Taste wiederholen.
 Wenn die Sperrfunktion aktiv ist, werden die Alarmausgänge geschlossen wenn der Netzstrom die eingestellte Spanne verlassen. Mit der Sperrfunktion (Latch) bleiben die Kontakte angeschlossen, selbst wenn der Fehler vom System entfernt wurde. Mit der ESC Taste werden die Ausgangskontakte geöffnet. (EPM-06C/06CS)

Einstellungnahme und Menüeinstellungen: (für EPM-06/06C/06CS)
Schalten Sie das Gerät bitte ein, nachdem Sie das Gerät entsprechend den Diagrammen in der Gebrauchsanweisung angeschlossen haben. Damit Ihre Messungen und Anwendungen fehlerfrei funktionieren, benutzen Sie bitte die entsprechenden Menüs, um die notwendigen Einstellungen für Ihr Gerät vorzunehmen.

- Einstellung des Stromwanderverhältnisses:**
In diesem Menü kann das Stromwanderverhältnis zwischen 1-2000 angepasst werden. (Dieses Menü ist nicht erhältlich für Geräte mit CT-25 Stromwandlern).
Hinweis: Wenn kein Stromwandler zwischen dem Gerät und dem Netz benutzt wird, geben Sie das Stromwanderverhältnis als "1" ein.
Beispiel: Wenn ein Stromwandler mit einem 30/5 A Verhältnis benutzt wird, muss das Stromwanderverhältnis als "6"(30/5) eingegeben werden,

Drücken Sie für 3 Sekunden die SET-Taste.
(Das tra Fo Menü wird angezeigt).

Drücken Sie die SET-Taste und stattdessen das "trA Fo Imr"-Menü angezeigt. (In CT-25 Multimeter werden stattdessen das "trA Fo Imr"-Menü angezeigt.)

(Hinweise): Drücken Sie die SET-Taste: die erste Ziffer vom angezeigten Wert wird auf dem Display auflinken, trA Fo Ur- oder Con nC n-Menus können ähnlich programmiert werden.

Drücken Sie auf der blinkenden Ziffer mit den AUF/AB Tasten, Gehen Sie mit der SET Taste reihenweise zu den nächsten Ziffern über. Um zur vorherigen Ziffer zu gelangen, drücken Sie bitte die ESC Tasten. Um zur nächsten Ziffer zu gelangen, drücken Sie bitte die SET Tasten.

Auf dem Display wird die Anzeige "trA Fo Ur" erscheinen. (Die Daten sind eingegeben, allerdings noch nicht aktiviert. Für Aktivierung, siehe oben).

Drücken Sie mehrmals die ESC Taste bis das Display "SAU SET yEs" anzeigen.

Drücken Sie bitte die SET Taste, sobald auf dem Display "SAU SET yEs" steht. Drücken Sie jetzt die SET Taste, während "SAU SET yEs" angezeigt wird und Sie die ESC-Taste drücken und mit den AUF/AB Tasten die Optionen wählen, werden die neuen Daten nicht gespeichert und der vorher eingestellte Wert wieder aktiviert.

Programmierung der Windungszahlen:

Dieses Menü ist nur für die Modelle mit CT-25 erhältlich. Hier wird die Anzahl der Windungen im CT-25 eingegeben. Diese Zahl kann zwischen 1 und 20 eingestellt werden. (Je grösser die Zahl, desto besser die Sensitivität der Messung.)



trn	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
I _n min(A)	2,00	1,00	0,66	0,50	0,40	0,33	0,28	0,24	0,22	0,20	0,18	0,16	0,15	0,14	0,13	0,12	0,11	0,10	0,10	
I _n max(A)	120	60	40	30	24	20	17	15	13	12	10	9	8,9	8,7	8,0	7,5	7,0	6,66	6,31	



Einstellung des Spannungswanderverhältnisses:

In diesem Menü kann das Spannungswanderverhältnis zwischen 0,1-4000,0 eingegeben werden.

Hinweis: Wenn kein Spannungswandler zwischen dem Gerät und dem Netz benutzt wird, geben Sie das Spannungswanderverhältnis bitte als "1" ein.

Beispiel: Wenn ein 34,5kV/100V Spannungswandler zwischen dem gemessenen Netz und dem Gerät benutzt wird, wird das Spannungswanderverhältnis als 345 (34500/100) eingegeben.



Auswahl des Verbindungstyps:

In diesem Menü wird der Verbindungstyp ausgewählt. Es gibt 2 Optionen: Sternschaltung (Star) und Dreieckschaltung (Delta).

Wenn "Sternschaltung" ausgewählt wird, macht das Gerät für Spannungen den Spannungsausgang zw. Phase-Neutral.

Wenn "Dreieckschaltung" ausgewählt wird, macht das Gerät für Spannungen eine Schaltung zw. Phase-Phase.

HINWEIS: Wenn "Dreieckschaltung" ausgewählt wird, ist Neutralstromschutz nicht gültig (selbst wenn diese Schutzoption aktiviert ist). Gleichzeitig verliert die "ESC" Taste ihre Funktion als Anzeige für Neutralstrom.



Kennworteinstellung:

In diesem Menü, wird ein Kennwort definiert und aktiviert. Um eine unbefugte Veränderung der Geräteneinstellung zu verhindern, müssen Sie in diesem Menü ein 4-stelliges Kennwort definieren und aktivieren. Unter dem Pin Menu, finden Sie die folgenden 2 Sub-Menüs:

Kennwortaktivierung:

Dieses Menü wird zum Aktivieren des Kennworts benutzt. Nach der Aktivierung des Kennworts, werden Sie beim 3 Sekunden langen Drücken der Taste nach Ihrem Kennwort gefragt.

Falls Sie ein falsches Kennwort eingegeben sollten, werden Sie nicht in den Programmiermodus gelangen können.

Hinweis: Die Fabrikeinstellung für das Kennwort ist "0000".



Drücken Sie die SET Taste für 3 Sekunden (das "trA Fo" Menu wird angezeigt).



Benutzen Sie bitte die AUF/AB Tasten, um in das Pin Menu zu kommen.



Drücken Sie die SET Taste (auf dem Display erscheint "Pin ACT IUA IE").



Drücken Sie die SET Taste (auf dem Display blinkt die erste Ziffer).



Benutzen Sie bitte die AUF/AB Tasten um die blinckende Ziffer einzustellen.



Die nächsten Ziffern werden reihenweise mit der SET Taste eingestellt. Um zur vorherigen Ziffer zu kommen, bitte die ESC Tasten bedienen. Nachdem Sie auch die letzte Ziffer eingestellt haben, drücken Sie bitte die SET Tasten. Das Display zeigt jetzt "Pin ACT IE". Mit den AUF/AB Tasten können Sie dies zu "on" ändern. (Die Daten sind eingegeben, allerdings noch nicht aktiviert. Für Aktivierung, siehe unten.)



Drücken Sie mehrmals die ESC Taste bis das Display "SAU SET yEs" angezeigt wird.



Drücken Sie jetzt die SET Taste, während "SAU SET yEs" angezeigt wird und Sie die ESC Tasten drücken oder mit den AUF/AB Tasten die Option "no" wählen, werden die neuen Daten nicht gespeichert und der vorher eingestellte Wert wieder aktiviert.



Kennwortänderung:

Mit diesem Menü können Sie Ihr Kennwort ändern.

Hinweis: Die Fabrikeinstellung für das Kennwort ist "0000".



Um Ihr Kennwort zu ändern, drücken Sie bitte die SET Taste für 3 Sekunden. (Auf dem Display wird dann das "trA Fo" Menu angezeigt.)



Benutzen Sie bitte die AUF/AB Tasten, um in das Pin Menu zu kommen.




Drücken Sie jetzt bitte die SET Tasten. (Das Display zeigt nun das "Pin ACT IUA IE" Menu an.)



Bedienen Sie die AUF/AB Tasten, bis Sie das "Pin CHA n9E" Menu gefunden haben.

DIGITALMULTIMETER


EM-06 / 06C / 06CS

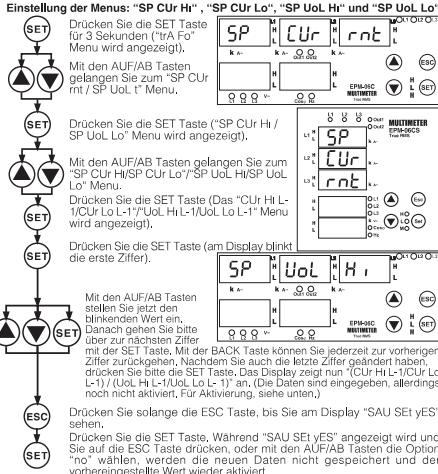

Anwendung der Starterverzögerung:
Wenn der Strom den "50mAxCtr"-Wert unterschreitet, wird die Starterverzögerung ausgelöst. Wegen des Anlaufstroms zu verhindern. Während dieser eingegebenen Zeit (Sekunden) bleibt der OUT1-Ausgang ausgeschaltet (falls U- gewählt wurde) und selbst wenn der Strom diesen Wert überschreitet, sieht das Gerät diese Überschreitung nicht als einen Fehler. Diese Funktion wird zusammen mit der "Auto Reset"-Funktion verwendet.


Anwendung der "Auto Reset"-Funktion:
Wenn "Auto Reset" als "ON" gewählt wird. Immer wenn der Strom den "50mAxCtr"-Wert unterschreitet, wird die Starterverzögerung zurückgestellt. Wenn der Strom den "50mAxCtr"-Wert überschreitet, wird die Starterverzögerung wieder aktiviert. Wenn "Auto Reset" als "OFF" gewählt wird: Wenn das Gerät aus- und eingeschaltet wird, wird die Starterverzögerung wieder aktiviert.

Wenden Sie sich bitte an das Schema unten für die "StA rt dEL" und "Aut o rSt" -Funktionen.

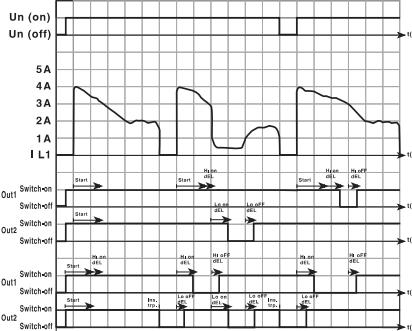

Sofrige Auslösungsfunktion:
Wenn die "CUR inS trP" Funktion als "on" gewählt wurde: Wenn die der IL 1 / L 2 / L 3 Ströme den eingegebenen Niederstromwert (CUR Lo L-1 / L-2 / L-3 / L-4) überschreitet, öffnet der entsprechende Überstromwert (CUR Hi L-1 / L-2 / L-3 / L-4) entsprechend, öffnet der entsprechende Ausgang sofort seine Kontakte und die Ausgangsdioden erlöschen gleichzeitig mit dem Leuchten der "H"-Diode auf den rechten Displaysseite des entsprechenden Stroms (wenden Sie sich bitte an das Regelwerk). Wenn einer der IL 1, L 2, L 3, IN Ströme den eingegebenen Niederstromwert 0,5 mal den entsprechenden Niederstromwert (CUR Lo L-1 / L-2 / L-3 / L-4) unterschreitet, öffnet der entsprechende Ausgang sofort seine Kontakte und die Ausgangsdioden erlöschen gleichzeitig mit dem Leuchten der "H"-Diode auf den rechten Displaysseite des entsprechenden Stroms (Wenden Sie sich bitte an das "Out Relais"-Menü). Wenn die "CUR inS trP"-Funktion als "OFF" gewählt wurde, wird diese Funktion inaktiv.

Die unten angegebenen Diagramme zeigen die Einstellungen der "CUR inS trP", "AUT o rSt" und "UoL inS trP" -Menüs:

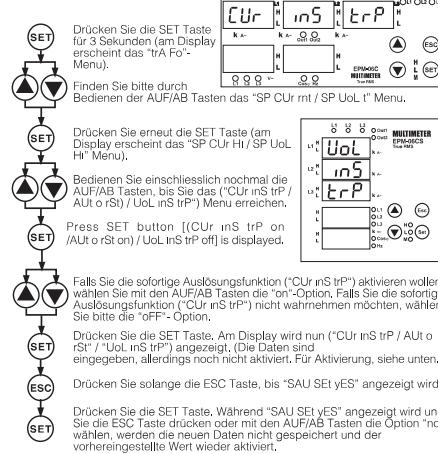

Spannungssollwerteneinstellung:
SP Unten werden die Funktionen und Verwendungszwecke der verschiedenen Einstellungen des SP UoL t Menus in Einzelheiten erklärt.
UoL
t

SP
UoL
H In diesem Menu werden die erwünschten Höchstwerte ("Hi") für Spannungen eingegeben. Diese Werte können für Phase-Phase/Phase-Neutralspannung (ändert sich je nach Wahl von Dreieck- oder Sternanschluss) getrennt eingegeben werden,

SP
UoL
H Falls alle Phase-Phase/Phase-Neutralspannungsweiten den eingestellten Höchstwert unterschreiten, ist der entsprechende Ausgang geschlossen und die entsprechende Diode leuchtet gleichzeitig mit dem Erlöschen der "H" Diode der Phasen. (siehe Ausgangsmenü)

Falls eine der Phase-Phase/Phase-Neutralspannungen den eingestellten "Hi"-Wert überschreitet, blinkt die "H" Diode der entsprechenden Spannung. Nachdem die eingestellte Einschaltverzögerungszeit (dEL) abgelaufen ist, schaltet die entsprechende Ausgang einschließlich der Diode für den entsprechenden Ausgang erloscht und die "H" Diode für den entsprechenden Ausgang schaltet sich fortwährend ein, (siehe Ausgangsmenü)

Falls alle Phase-Phase/Phase-Neutralspannungen den eingestellten "Hi"-Wert als den "Spannungshysteresewert" (UoL Hi Hys) unterschreiten, schaltet sich die entsprechende Ausgang nach dem Ablaufen der eingestellten Ausschaltverzögerungszeit (UoL off dEL) aus. Die Diode für den entsprechenden Ausgang leuchtet und die "H" Diode für den entsprechenden Ausgang erloscht, (siehe Ausgangsmenü)

Hinweis: Die Höchstwerte können für alle Phase-Phase/Phase-Neutralspannungen getrennt eingegeben werden. Je nachdem sind die Spannungsschwellenwerte (UoL Hi Hys), Ausschaltverzögerungszeiten (H on dEL) und Einschaltverzögerungszeiten (H on dEL) gemeinsam und werden für alle Spannungen zusammen eingegeben.

Wenn der Verbindungstyp des Systems (Dreieck/Stern) am Gerät definiert wird (im "Con Iec tio n" -Menü), ändert das Gerät die UoL Hi L-1 / L-2 / L-3 Werte automatisch nach dem neuen Anschluss Typ.

Beispiel: Der Verbindungstyp ist als Stern (mit Neutral) und die Spannungswerte als UoL Hi Hys=10V, UoL Hi L-1=250V, UoL Hi L-2=255V, UoL Hi L-3=260V eingestellt. Wenn der Verbindungstyp zu Dreieck (ohne Neutral) verändert wird, berechnet das Gerät diese Werte für den Phase-Phase Anschluss und ändert sie. Die neuen Werte ändern sich zu:
UoL Hi Hys = 10V
UoL Hi L-1 (Spannung zwischen L1-L2) = 433V
UoL Hi L-2 (Spannung zwischen L2-L3) = 441V
UoL Hi L-3 (Spannung zwischen L3-L1) = 450V

Dieses Menü hat 6 Sub-Menüs:
UoL Hi L-1, UoL Hi L-2, UoL Hi L-3, UoL Hi Hys, UoL on dEL, UoL off dEL.

DIGITALMULTIMETER

EPM-06 / 06C / 06CS

SP
UoL
Lo

In diesem Menu werden die erwünschten Mindestwerte ("Lo") für Spannungen eingegeben. Diese Werte können für Phase-Phase/Phase-Neutralspannung (ändert sich je nach Wahl von Dreieck- oder Sternanschluss) getrennt eingegeben werden.

Fälle alle Phase-Phase/Phase-Neutralspannungswerte über den eingestellten "Lo"-Wert liegen, leuchtet die Diode des entsprechenden Ausgangs gleichzeitig mit dem Erlöschen der "L"-Diode der Phasen auf der rechten Seite des Displays, (siehe Ausgangsmenu).

Falle einer der Phase-Phase/Phase-Neutralspannungen den eingestellten "Lo"-Wert unterschreitet, blinkt die "L"-Diode der entsprechenden Spannung. Nachdem die eingestellte Einschaltverzögerungszeit (Lo dEL) abgelaufen ist, wird der entsprechende Ausgang eingeschaltet. Die Diode für den entsprechenden Ausgang erlischt und die "L"-Diode für den entsprechenden Ausgang schaltet sich fortwährend ein.

Falls alle Phase-Phase/Phase-Neutralspannungen den eingestellten "Lo"-Wert unterschreiten, blinkt die "L"-Diode der entsprechenden Spannung. Nachdem die eingestellte Einschaltverzögerungszeit (Lo dEL) abgelaufen ist, wird der entsprechende Ausgang eingeschaltet. Die Diode für den entsprechenden Ausgang erlischt und die "L"-Diode für den entsprechenden Ausgang erlöscht.

Hinweis: Die Mindestwerte können für jede Phase-Phase/Phase-Neutralspannungen getrennt eingegeben werden.

Jedoch sind die Spannungshysteresen (UoL Lo HyS), Ausschaltverzögerungszeit (Lo dEL off dEL) und Einschaltverzögerungszeit (UoL Lo dEL) gemeinsam und werden für alle Spannungen zusammen eingegeben. Wenn der Verbindungstyp des Systems (Dreieck/Stern) am Gerät definiert wird (im "Connec.tio.n n° n" Menü), ändert das Gerät die UoL Lo L1/L2/L3 Werte automatisch nach dem neuen AnschlussTyp.

Beispiel: Der Verbindungstyp ist als Stern (mit Neutral) und die Spannungswerte als UoL Lo HyS = 10V, UoL Lo L1 = 180V, UoL Lo L2 = 175V, UoL Lo L3 = 170V eingestellt. Wenn der Verbindungstyp zu Dreieck (ohne Neutral) verändert wird, berechnet das Gerät diese Werte für den Phase-Phase Anschluss und ändert sie.

Die neuen Werte ändern sich zu:

UoL Lo HyS = 10V

UoL Lo L1 - (Spannung zwischen L1-L2) = 311V

UoL Lo L2 - (Spannung zwischen L2-L3) = 303V

UoL Lo L3 - (Spannung zwischen L3-L1) = 294V

Dieses Menü hat 6 Sub-Menus:

UoL Lo L1, UoL Lo L2, UoL Lo L3, UoL Lo HyS, Lo on

dEL, Lo off dEL

UoL
H
L
-

In diesem Menü kann der Höchstwert für die L1 Phasenspannung (wenn die Schaltung als Stern gewählt wurde) zwischen 0-300V oder für die Spannung zwischen den L1-L2 Phasen (wenn die Schaltung als Dreieck gewählt wurde) zwischen 0-500V eingegeben werden. Wenn der Wert als 0 (null) eingegeben wurde, wird die Überspannungswarnung für Phase-Phase/Phase-Neutralaktiv.

(Für weitere Informationen: s. "SP UoL Hi" Menü)

Hinweis: Die Werte für die L2 und L3 Phasen werden ähnlich eingegeben.

UoL
Lo
L
-

In diesem Menü kann der Mindestwert für die L1 Phasenspannung (wenn die Schaltung als Stern gewählt wurde) zwischen 0-200V oder für die Spannung zwischen den L1-L2 Phasen (wenn die Schaltung als Dreieck gewählt wurde) zwischen 0-500V eingegeben werden. Wenn der Wert als 0 (null) eingegeben wurde, wird die Niederspannungswarnung für Phase-Phase/Phase-Neutralaktiv.

(Für weitere Informationen: s. "SP UoL Lo" Menü)

Hinweis: Die Werte für die L2 und L3 Phasen werden ähnlich eingegeben.

(Siehe auch S. 4 für SP CUr Hi, SP CUr Lo, SP CUr Hi, SP UoL Lo Menueinstellungen)

UoL
H
Hi
HYS
UoL
Lo
HYS


In diesem Men wird die Überspannungshysterese der Überspannungsschutzung eingestellt (dies ist auch gängig für Phase-Phase/Phase-Neutral Spannungen). Dieser Wert kann zw. 0-200V für Stern- und Dreieckschaltung gleicherweise eingegeben werden.

(Für weitere Information: s. "SP UoL Hi" Menü)

In diesem Men wird die Niederspannungshysterese der Niederspannungsschutz eingestellt (dies ist auch gängig für Phase-Phase/Phase-Neutral Spannungen). Dieser Wert kann zw. 0-200V für Stern- und Dreieckschaltung gleicherweise eingegeben werden.

(Für weitere Information: s. "SP UoL Lo" Menü)

Einstellung der "UoL Hi HyS", "UoL Lo HyS", "CUr Hi HyS" und "CUr Lo HyS" Menus:

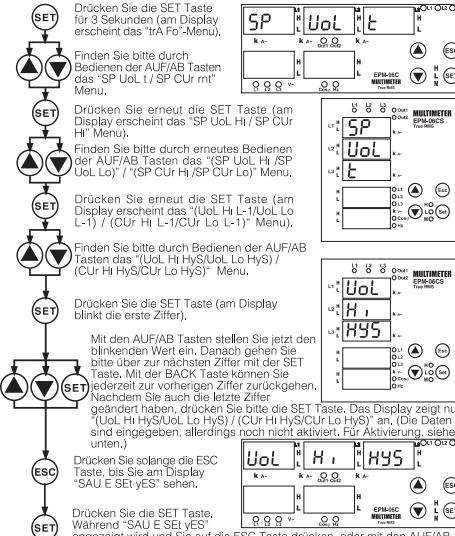


In diesem Men wird die Einschaltverzögerungszeit der Überspannungsschutzung zwischen 0,00-999,9 Sekunden eingegeben, (dies ist auch gängig für alle Phase-Phase/Phase-Neutral Spannungen) (Für weitere Informationen: s. "SP UoL Hi" Menü)

In diesem Men wird die Einschaltverzögerungszeit der Niederspannungsschutzung zwischen 0,00-999,9 Sekunden eingegeben, (dies ist auch gängig für alle Phase-Phase/Phase-Neutral Spannungen) (Für weitere Informationen: s. "SP UoL Lo" Menü)

In diesem Men wird die Ausschaltverzögerungszeit der Überspannungsschutzung zwischen 0,00-999,9 Sekunden eingegeben, (dies ist auch gängig für alle Phase-Phase/Phase-Neutral Spannungen) (Für weitere Informationen: s. "SP UoL Hi" Menü)

In diesem Men wird die Ausschaltverzögerungszeit der Niederspannungsschutzung zwischen 0,00-999,9 Sekunden eingegeben, (dies ist auch gängig für alle Phase-Phase/Phase-Neutral Spannungen) (Für weitere Informationen: s. "SP UoL Lo" Menü)

Einstellung der "Hi on dEL", "Hi off dEL", "Lo on dEL", "Lo off dEL", "H1 on dF", "H1 off dF" und "L1 on dF" Menus:

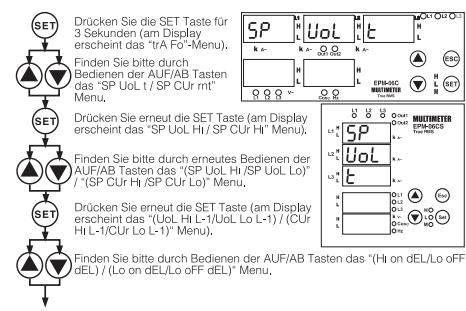


DIGITALMULTIMETER

EM-06 / 06C / 06CS



Serielle Kommunikation (nur gültig für EPM-06CS):

Ganz oben hat einen optisch-isolierten MODBUS RTU-Kommunikationsparameter. Alle gemessenen Parameter können auf ein PC übertragen werden. Die Wanderverhältnisse und Kommunikationsparameter können eingestellt werden sowie gespeicherte Bedarfs- und Energiewertzurückgesetzt werden können. Die Parameterstellungen für die serielle Kommunikation sind unten beschrieben.

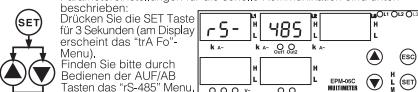

Drücken Sie die SET Taste, Am Display erscheint: "Adr ESS/bAU d/Par ity". Die Daten sind eingegeben, jedoch noch nicht aktiviert. Für die Aktivierung, verwirken Sie bitte folgende Schritte:

Drücken Sie mehrmals die ESC Taste, bis Sie am Display "SAU SEI yES" sehen.

Drücken Sie die SET Taste. Während "SAU SEI yES" angezeigt wird und Sie auf die ESC Taste drücken, oder mit den AUF/AB Tasten die Option "no" wählen, werden die neuen Daten nicht gespeichert und der vorher eingestellte Wert wieder aktiviert.

MODBUS RTU PROTOKOLL (nur gültig für EPM-06CS):

Standard MODBUS RTU Nachrichtformat ist unten dargestellt.

T	ADRESSE	FUNKTION	DATEN	NXB8BIT	CRCH	CRCL	T
8 BIT	8 BIT						
03H	READ HOLD REGISTERS						
06H	PRESET SINGLE REGISTER						
10H	PRESET MULTIPLE REGISTERS						

Start- und "-T" Endzeichen (3,5 Zeichenspanne) werden als die Zeitspanne definiert, in denen die angeschlossenen Geräte keine Daten austauschen dürfen, damit sie den Anfang oder das Ende einer Nachricht erkennen zu können. Das Adressfeld (001-247) stellt die serielle Adresse des Geräts dar, die am Kommunikationsbus angesprochen werden soll. Der Registerzahl kann zwischen 20 zu "Master" oder von "Master" zu "Slave" gesendet werden, CRC ist die Fehler-Prüfmethode die im MODBUS RTU Modus verwendet wird und aus 2 Bytes besteht.

Gültige MODBUS Funktionen:

03H	READ HOLD REGISTERS
06H	PRESET SINGLE REGISTER
10H	PRESET MULTIPLE REGISTERS

Die "Read Hold (03)" Funktion wird verwendet, um die gemessenen und eingegebenen Werte zu lesen. Das Gerät sendet eine Fehlermeldung, wenn man versucht eine nicht in der Registertabelle eingegebene Adresse zu lesen.

Bei einer reinen Phase-Neutral Spannung von Phase 1 zu lesen, muss man folgende Nachricht an das Gerät senden:

01 03 00 00 00 02 XX XX

01 Gerät-Adresse

03 Funktion

00 Adresse MSB

00 Adresse LSB

00 Montageplatz MSB

02 Registerzahl LSB

XX CRC MSB

XX CRC LSB

Das Preset Single Register (06) ist für das Eingeben von Einzelwerten, das Lösen von Werten oder die Rückstellung zu min., max. und Bedarfswerte vorbereitet.

Das Stromwanderverhältnis kann zwischen 0 und 2000 eingegeben werden, sowie das Spannungswanderverhältnis zwischen 1-40000 eingegeben werden kann.

Beispiel: um das Stromwanderverhältnis auf 100 zu stellen, muss man folgende Nachricht an das Gerät senden:

01 06 00 02 00 64 XX XX

01 Gerät-Adresse

06 Funktion

00 Adresse MSB

02 Adresse LSB

00 Data MSB

64 Data LSB

XX CRC MSB

XX CRC LSB

Das Preset Multiple Register (10H) wird für die Veränderung von mehrfachen Registereinrichtungen verwendet.

Beispiel: um das Stromwanderverhältnis auf 100 und das Spannungswanderverhältnis auf 20,0 zu stellen, muss man folgende Nachricht an das Gerät senden:

01 06 00 00 02 00 04 C8 00 64 XX XX

01 Gerät-Adresse

10 Gerät-Adresse

80 Adresse MSB

00 Adresse LSB

00 Registerzahl MSB

02 Registerzahl LSB

04 Bytesatz

00 Data MSB

C8 Data LSB

00 Data MSB


64 Data LSB

XX CRC MSB


XX CRC LSB

PC-ANSCHLUSS DES EPM-04CS:

AN EINE LEITUNG KÖNNEN MAX. 31 GERÄTE ANGESCHLOSSEN WERDEN.

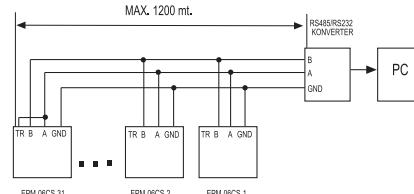

MIT HILFE EINES REPEATERN KÖNNEN BIS ZU 247 GERÄTE AN EINE LEITUNG ANGESCHLOSSEN WERDEN.

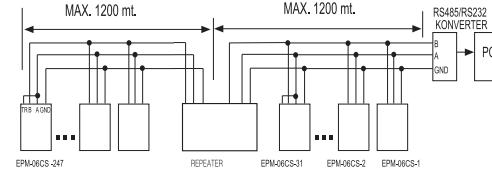

Technical Features

Betriebsspannung (Un)	Siehe Gerätrückseite		
Betriebsfrequenz (f)	45-65 Hz		
Hilfspannungseingang	< 4 VA		
Messeingang	< 1 VA		
Strom	0,05-5,5A-		
Spannung	2 - 120 VAC für CT-25		
Klasse	10-300 V AC (Phase - Neutral)		
Stromwanderverhältnis	10-500 V AC (Phase - Phase)		
Windungszahlen für CT-25	1±1% Ziffer [(10%-100%) x Volle Skala]		
Spannungswanderverhältnis	1 ... 2000		
Max. Cr X Vtr	1 ... 20		
Schnittstelle	1 ... 4000		
(nur gültig für EPM-06CS)	: MODBUS RTU (RS 485)		
Baud Rate (für EPM-06CS)	optisch isoliert, programmierbar		
Adresse (für EPM-06CS)	2400-38400 bps		
Parität (für EPM-06CS)	1-247		
Relaisausgänge	Keine, ungerade, gerade, 8 Datenbits, 2 Endbits		
(nur gültig für EPM-06/06CS)	2 NO, 5A 1250 VA		
Umgebungstemperatur	-5°C; +50°C		
Anzeige	Rote Leuchtdioden		
Abmessungen	PR-19, PK-26		
Gehäuseschutzklasse	Doppelte Isolierung - Klasse II (IP 20)		
Klemmenschutzklasse	IP 44		
Gehäusematerial	IP 00		
Installation	Nicht brennbar		
Kabelquerschnitt für Klemmen	Frontplattenmontage(PR19)		
Gewicht	Hutschiene montage(PK26)		
Montageklasse	2,5 mm²		
Montageausschnittabmessungen	0,56 kg (PR-19) 0,52 kg (PK-26)		
	Klasse III 91x91 mm (PR-19) 46x107 mm (PK-26)		
Werkeinstellungen			
Für Modelle mit „.5A“			
Ctr - 0001	CUR Hi L-1 - 5.000	CUR Lo L-2 - 0.000	Out relay - U-I
Utr - 0001	CUR Hi L-2 - 5.000	CUR Lo L-3 - 0.000	Latch - oFF
trn - 01	CUR Hi L-3 - 5.000	CUR Lo L-n - 0.000	Out Inverse - oFF
ConnEc - StAr	CUR Hi L-n - 5.000	CUR Lo Hys - 0.200	
Hi on dEL - 010.0	Lo on dEL - 010.0	Lo on dEL - 010.0	bAud - 9600
Pin - 0000	Hi on dEL - 010.0	Str Art dEL - 0.000	AddRES - 001
		Auto reset - oFF	PArty - no
dt - 15	CUR Lo L-1 - 0.000	Cur ins trP	
Uol Hi L-1 - 250	Uol Lo L-3 - 180	Frq Hi - 63	
Uol Hi L-2 - 250	Uol Lo Hys - 010.0	Frq Hs - 01.00	
Uol Hi L-3 - 250	Lo on dEL - 003.0	Frq Lo - 47	
Uol Hi Hys - 10	Lo off dEL - 003.0	Frq Lo Hys - 01.00	
Hi on dEL - 003.0	Uol PHS Seq - oFF	Frq on dEL - 003.0	
Hi off dEL - 003.0	Uol inS trP - oFF	Frq off dEL - 003.0	
Uol Lo L-1 - 180	Uol Lo L-2 - 180		



Für Modelle mit CT-25

Ctr Hi L-1 - 100.0	CUR Lo L-2 - 0.000
Ctr Hi L-2 - 100.0	CUR Lo L-3 - 0.000
Ctr Hi L-3 - 100.0	CUR Lo L-n - 0.000
Ctr Hi Hys - 2.000	Lo on dEL - 010.0
Hi on dEL - 010.0	Lo off dEL - 010.0
Hi off dEL - 010.0	Str Art dEL - 0.000
Uol Lo L-1 - 0.000	Auto reset - oFF
	Cur ins trP - oFF


DIGITALMULTIMETER

EPM-06 / 06C / 06CS


Abmessungen

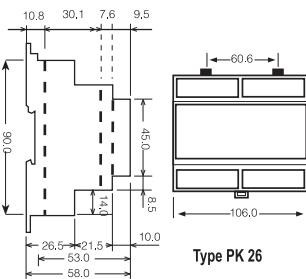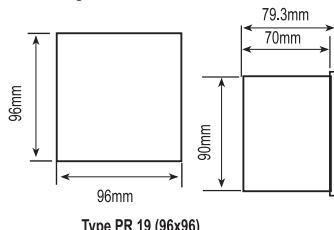

Montageausschnittabmessungen

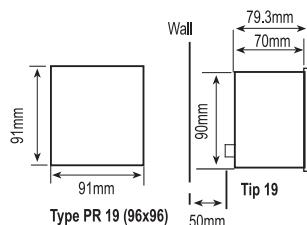

Anschlussplan

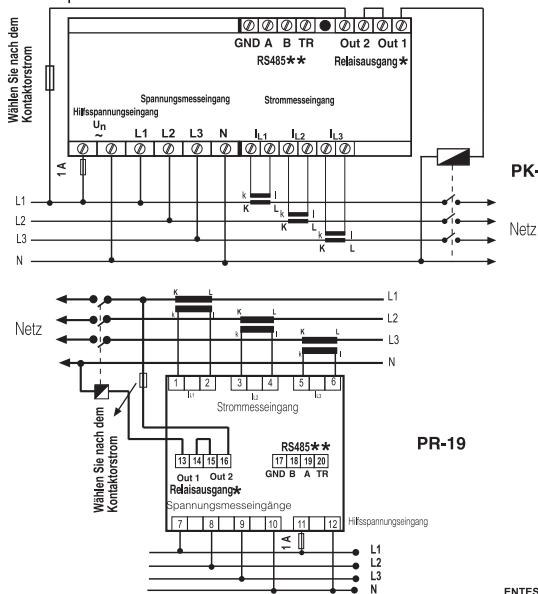

* Nur gültig für EPM-06C/06CS.

** Nur gültig für EPM-06CS.

Hinweis: Für Modelle mit CT-25 Stromwandler:

k: Wenn CT-25 benutzt wird: rotes Kabel ist an der Klemme "K" angeschlossen.

I: Wenn CT-25 benutzt wird: schwarzes Kabel ist an der Klemme "I" angeschlossen.

Kontaktoperationen *

ALTERNATIVE 1 (U-I)

Strom --> Nieder / Über

Out 1

Spannung --> Nieder / Über

Out 2

Frequenz --> Nieder / Über

Phasenfolge

ALTERNATIVE 2 (H-L)

Spannung --> Nieder

Frequenz --> Über

Strom --> Über

* Nur gültig für EPM-06C/06CS

Netz

Netz

ENTES Elektronik Cihazlar Imalat ve Ticaret A.S.

Adresse : Dudullu OSB, 1. Cadde, No:23, 34776 Umraniye- Istanbul / TURKEY

Tel : +90 (216) 313 0110

Fax : +90 (216) 314 1615

Web : www.entes.com.tr

MODBUS REGISTER TABELLE

EPM-04CS / EPM-06CS

MODBUS REGISTER TABLE

MODBUS REGISTER TABLE							
ADRESSE	ADRESSE (HEX)	REGISTERTYPEN	RW	BEREICH	ENHET	MULTIPLIKATOR	FORMAT
0	0000	PHASE L1 SPANNUNG	R	(03000)uVIT	Volt	0.1	unsigned int
1	0001	PHASE L2 SPANNUNG	R	(03000)uVIT	Volt	0.1	unsigned int
2	0002	PHASE L3 SPANNUNG	R	(03000)uVIT	Volt	0.1	unsigned int
6	0006	PHASE L1 STROM	R	(02000)uCT	Ampere	0.001	unsigned int
8	0008	PHASE L1 STROM	R	(02000)uCT	Ampere	0.001	unsigned int
10	000A	PHASE L3 STROM	R	(02000)uCT	Ampere	0.001	unsigned int
12	000C	MASSENSTROM	R	(02000)uCT	Ampere	0.001	unsigned int
14	000E	PHASE L2 SPANNUNG	R	(05000)uVIT	Volt	0.1	unsigned int
16	0010	PHASEPHASE L1-2 SPANNUNG	R	(05000)uVIT	Volt	0.1	unsigned int
18	0012	PHASEPHASE L1-2 SPANNUNG	R	(05000)uVIT	Volt	0.1	unsigned int
20							
22							
24							
26							
28							
30							
32							
34							
36							
38	0026	PH445D_1.COSφ *	R	(-1000+1000)	-	0.001	int
40	0028	PH445L_2.COSφ *	R	(-1000+1000)	-	0.001	int
42	002A	PHASEL_3.COSφ *	R	(-1000+1000)	-	0.001	int
44							
46							
48							
50							
52							
54	0036	DURCHSCHNITTLICHE INDUKTIVES COSφ *	R	(-1000+1000)	-	0.001	int
56	0038	DURCHSCHNITTLICHE KAPAKTIVES COSφ *	R	(-1000+1000)	-	0.001	int
58	003A	PHASEL_1.FREQUENZ	R	(4000-7000)	Hz	0.01	unsigned int
60	003C	PHASE L1 SPANNUNGSMINTEL	*	(0-360)	Grad	1	unsigned int
62	003E	PHASE L2 SPANNUNGSMINTEL	*	(0-360)	Grad	1	unsigned int
64	0040	PHASE L3 SPANNUNGSMINTEL	*	(0-360)	Grad	1	unsigned int
66	0042	PHASE L1 STROMMINTEL	*	(0-360)	Grad	1	unsigned int
68	0044	PHASE L2 STROMMINTEL	*	(0-360)	Grad	1	unsigned int
70	0046	PHASE L3 STROMMINTEL	*	(0-360)	Grad	1	unsigned int
72							
74							
76							
78							
80							
82							
84							
86							
88							
90							
92							
94							
96							
98							
100							
102							
104							
106							
108							
110							
112							
114							
116	0075	PHASE L1 MIN. SPANNUNG	R/W	(0-300)uVIT	Volt	0.1	unsigned int
120	0076	PHASE L1 MIN. SPANNUNG	R/W	(0-300)uVIT	Volt	0.1	unsigned int
122	007A	PHASE L1 MIN. SPANNUNG	R/W	(0-300)uVIT	Volt	0.1	unsigned int
124	007C	PHASEPHASE L1+2 MIN. SPANNUNG	R/W	(0-300)uVIT	Volt	0.1	unsigned int
126	007F	PHASEPHASE L2+3 MIN. SPANNUNG	R/W	(0-300)uVIT	Volt	0.1	unsigned int
128	0080	PHASEPHASE L1+2 MIN. SPANNUNG	R/W	(0-300)uVIT	Volt	0.1	unsigned int
132	0082	PHASE L1 MIN. STROM	R/W	(0-600)uCT	Ampere	0.001	unsigned int
132	0084	PHASE L2 MIN. STROM	R/W	(0-600)uCT	Ampere	0.001	unsigned int
134	0086	PHASE L3 MIN. STROM	R/W	(0-600)uCT	Ampere	0.001	unsigned int
136							
138							
140							
142							
144							
146							
148							

MODBUS REGISTER TABLE

MODBUS REGISTER TABLE							
ADRESSE	ADRESSE (HEX)	REGISTRIEREN	RW	BEREICH	EINHEIT	MULTIPLIKATOR	FORMAT
152							
153							
154							
155							
156							
157							
162							
164	004A	PHASE_1 I MAX SPANNUNG	R/W	[0-3000] mV	Volt	0,1	unsigned int
	004B	PHASE_1 I MAX SPANNUNG	R/W	[0-3000] mV	Volt	0,1	unsigned int
168	0048	PHASE_1 2 MAX SPANNUNG	R/W	[0-3000] mV	Volt	0,1	unsigned int
170	00AA	PHASE-PHASE_1 I,2 MAX SPANNUNG	R/W	[0-3000] mV	Volt	0,1	unsigned int
172	00AC	PHASE-PHASE_1 I,2,3 MAX SPANNUNG	R/W	[0-5000] mV	Volt	0,1	unsigned int
174	00AF	PHASE-PHASE_1 I,2,3 MAX SPANNUNG	R/W	[0-5000] mV	Volt	0,1	unsigned int
176	00B0	PHASE_1 I MAX STROM	R/W	[0-6000] mA	Ampere	0,001	unsigned int
	00B1	PHASE_1 I MAX STROM	R/W	[0-6000] mA	Ampere	0,001	unsigned int
180	00B2	PHASE_1 I MAX STROM	R/W	[0-6000] mA	Ampere	0,001	unsigned int
182							
186							
190							
192							
194							
196							
198							
200							
202							
204							
206							
208							
210	00D2	PHASE_1 I MAX STROMBEREICH	R/W	[0-6000] mA CT	Ampere	0,001	unsigned int
210	00D4	PHASE_1 I MAX STROMBEREICH	R/W	[0-6000] mA CT	Ampere	0,001	unsigned int
214	00D6	PHASE_1 I MAX STROMBEREICH	R/W	[0-6000] mA CT	Ampere	0,001	unsigned int
216							
218							
220							
222							
224							
226							
228							
230							
232							
234							
236							
238							
240							
242							
244							
246							
248							
250							
252							
254							
256							
32788	8009	STROMWANDLERVERHALTMIS	R/W	[0-6000]	-	-	short/int
32789	8001	STROMWANDLERVERHALTMIS	R/W	[0-2000]	-	-	short/int
32771	8003	BEDARFSZEIT	R/W	1-60	minute	1	short/int
32777	8009	KOMMUNIKATIONSADRESSE	R/W	0-247	-	-	short/int
32778	8000	BALANCE	R/W	1-2	-	-	short/int
32780	8000	DEFAT	R/W	0-2	-	-	short/int
32780	8000	PASSWORT AKTIVIEREN	R/W	0-1	-	-	short/int
32781	800D	PASSWORT	R/W	0-9999	-	-	short/int
32782	8006	ANSUCHLUSSWAHL	R/W	[b1]	-	-	short/int
BAUDRATE 15:	PARTIT D-2:		PASSWORT AKTIVIEREN 04 : ANSUCHLUSSWAHL 04 :				
38400 bps	0 Neindek		0 Star				
19200 bps	1 Upgrade		1 Aktivieren				
9600 bps	2 Grade		1 Delta				
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							
4800 bps							
2400 bps							
1200 bps							
600 bps							
300 bps							
150 bps							
75 bps							
38400 bps							
19200 bps							
9600 bps							

MODBUS REGISTER TABLE

ADRESS (HEX)	ADRESS (DEC)	REGISTRIEREN	RW	BERICHT	EHNEIT	MULTIPUNKTOR	FORMAT
33028	8102	AUSGABE FUNKTION	R/W	[c]	-	-	short/int
33027	8103	REGE FUNKTION	R/W	[c]	-	-	short/int
33028	8104	AUSGABE UMKEHREN	R/W	[c]	-	-	short/int
33029	8105	PHASESEQUENZ/BEWÄRTUNG	R/W	[c]	-	-	short/int
33029	8106	SPANNUNGSVOR SCHALTFAHRZEUG	R/W	[c]	-	-	short/int
33029	8107	STROM	R/W	[c]	-	-	short/int
33029	8108	AUTORESET FUNKTION	R/W	[c]	-	-	short/int
33030	8109	STARTVERFÜGBARKEIT	R/W	[d...65535]	Sekunde	0,1	short/int
33034	810A	L1HOCHSPANNUNGSANMELDUNG	R/W	[d...65535]	Volt	0,1	short/int
33035	810B	L2HOCHSPANNUNGSANMELDUNG	R/W	[d...65535]	Volt	0,1	short/int
33036	810C	L3HOCHSPANNUNGSANMELDUNG	R/W	[d...65535]	Volt	0,1	short/int
33037	810D	L1HOCHSTROMANMELDUNG	R/W	[d...65535]	Ampere	0,001	short/int
33038	810E	L2HOCHSTROMANMELDUNG	R/W	[d...65535]	Ampere	0,001	short/int
33039	810F	L3HOCHSTROMANMELDUNG	R/W	[d...65535]	Ampere	0,001	short/int
33040	8110	LNHOCHSTROMANMELDUNG	R/W	[d...65535]	Ampere	0,001	short/int
33041	8111	HÖCHSTQUOTENANMELDUNG	R/W	[d...65535]	Hq	0,01	short/int
33046	8116	L1MEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Va	0,1	short/int
33047	8117	L1MEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Vb	0,1	short/int
33048	8118	L1MEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Vc	0,1	short/int
33048	8119	LNMEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Ampere	0,001	short/int
33050	811A	LNMEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Ampere	0,001	short/int
33051	811B	LNMEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Ampere	0,001	short/int
33052	811C	LNMEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Ampere	0,001	short/int
33053	811D	NTMEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Hq	0,01	short/int
33057	8120	HISTERESE DOORPLAN AUSGAFFE	R/W	[d...65535]	Va	0,1	short/int
33058	8121	HISTERESE HOCHSTROMANMELDUNG	R/W	[d...65535]	Ampere	0,001	short/int
33058	8122	HISTERESE FAHRSICHERHEITSWARNUNG	R/W	[d...65535]	Hq	0,01	short/int
33064	8128	HISTERESE MEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Va	0,1	short/int
33065	8129	HISTERESE MEHRSPANNUNGSWARNUNG	R/W	[d...65535]	Ampere	0,001	short/int
33066	812A	HISTERESE NTBEZOBLINDEWANDELN	R/W	[d...65535]	Hq	0,01	short/int
33070	812E	HOCHSPANNUNGSWARNUNG-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33071	812F	HOCHSTROMWARNUNG-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33072	8130	HEIßERSPANNUNGSWARNUNG-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33073	8131	NEDERSTROMWARNUNG-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33074	8132	PROZESS24SPANNUNG-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33075	8137	HOCHSPANNUNGSCODE-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33080	8138	HOCHSPANNUNGSCODE-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33081	8139	MEHRSPANNUNGSCODE-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33082	813A	NEDERSTROMCODE-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
33083	813B	FREIEN[24]SPANNUNG-ZET	R/W	[d...65535]	Sekunde	0,1	short/int
 SGANGSKONTAKTE 0-1: RIEGL 0-1: AUSGABE UMKEHREN 0-1: PHASENÜBERWACHUNG 0-1: AUTO RESET 0-1:							
0 Deaktivieren				0 Deaktivieren			
1 Aktivieren				1 Aktivieren			
 ANNUUNG SOFORT-TRIP 0-1: STRON SOFORT-TRIP 0-1: ANNUUNG SOFORT-TRIP 0-1:							
0 Deaktivieren				0 Deaktivieren			
1 Aktivieren				1 Aktivieren			

Available only for EPM-04CS/06CS

* Available only for EPM-06CS

18